

Remote 952.450, 952.452, 952.454, 952.456, 952.460



1. Standby On/Off
2. Volume up
3. Volume down
4. Direction Prev/Next Up/Down
5. Play/Pauze
6. Mute
7. Select USB input
8. Select Bluetooth
9. Select Aux in

Afstandsbediening 952.450, 952.452, 952.454, 952.456, 952460



1. Stand-by Aan/Uit
2. Volume omhoog
3. Volume omlaag
4. Richting Vorige/Volgende omhoog/omlaag
5. Afspelen/Pauze
6. Geluid dempen
7. Selecteer USB
8. Selecteer Bluetooth
9. Selecteer Aux in