

# max

## MUSIC

### KB1 Electronic Keyboard 61-key

Ref. nr.: 130.100



## INSTRUCTION MANUAL

V2.2

**Congratulations** to the purchase of this MAX Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

**NOTE:** To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

*Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.*

# UNPACKING INSTRUCTION

**CAUTION!** Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Supplied contents:


- MAX Music KB1 keyboard
- Power supply
- Music sheet stand

# POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.



Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

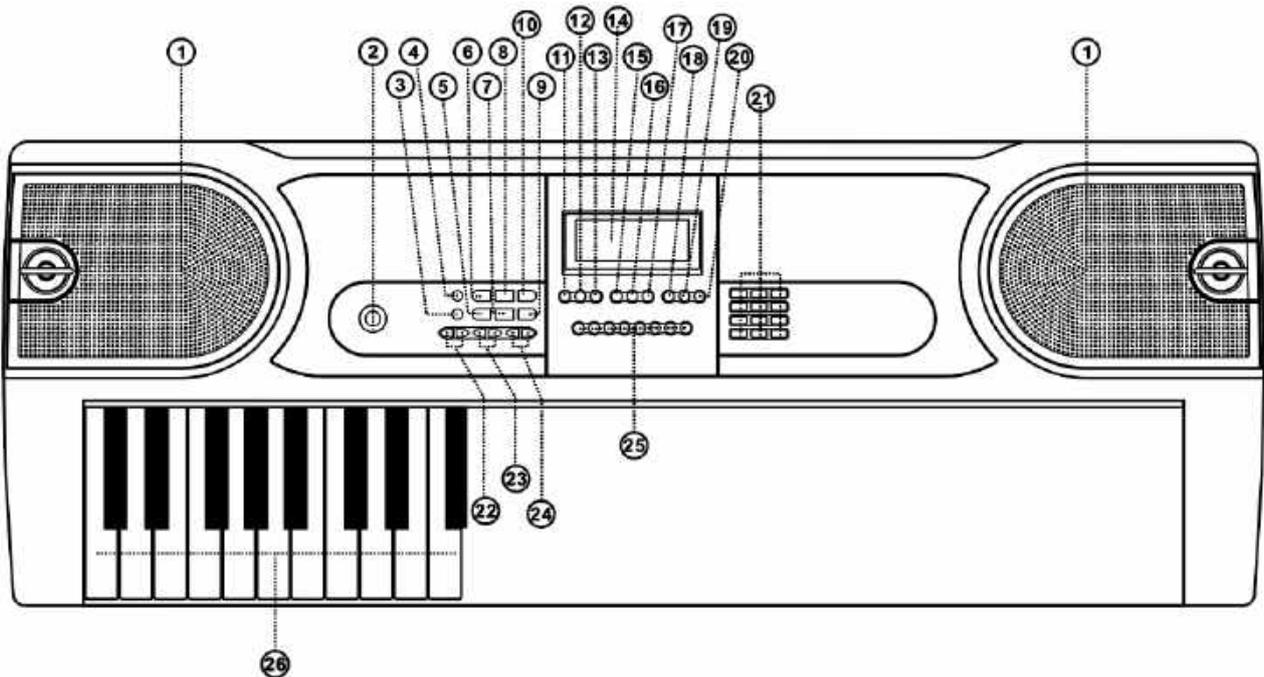

# CONTROLS

## 1. SPEAKERS

Loudspeakers to reproduce the sound of the music played. Sound level is determined on the basis of the volume setting.

## 2. POWER ON/OFF

Switch to turn the keyboard on or off.

## 3. FINGERED CHORD

In this mode, you play the individual notes of the chord in your left hand. Under the state that the rhythm is activated, press [Fingered Chord]. After the "FIN" shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard. Press [Fingered Chord] again, "FIN" will disappear from the display. The fingered chord function will be disabled.

## 4. SINGLE CHORD

Under the state that the rhythm is activated, press [Single Chord]. After "SIN" shows on the display, you can play a single chord on the keys in the chord zone of the keyboard. Press [Single Chord] again, "SIN" will disappear from the display. The single chord function will be disabled.

## 5. RECORD

Press [Record] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will flash on the display and recording will stop automatically. Press [Play] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [Play] to playback the recorded rhythm.

**6. START/STOP**

Press to start or stop playing selected program.

## 7. PROGRAM

Press [Program] to enable the rhythm programming function, "PRG" will show on the display and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. 32 Percussions can be recorded at maximum, after that "PRG" will flash on the screen and programming will stop automatically. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disable the programming function. All recorded rhythms will be removed.

## 8. SYNC

When in rhythm mode, press [Sync]. "SYN" will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accomp rhythm.

## 9. PLAY

Press to playback recorded notes or rhythms.

## 10. FILL-IN

Press the Fill In button to add a fill to the accompaniment rhythm of your song. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

## 11. KEYBOARD PERCUSSION

This Keyboard provides 61 kinds of **keyboard** percussions. Press [Percussion] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disable the keyboard percussion function.

## 12. SUSTAIN

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disabled.

## 13. VIBRATO

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disabled.

## 14. LCD DISPLAY

Displays current mode, notes to play, rhythm, tempo, etc.

## 15. ONE-KEY TRAINING

Press [One Key] to enable the single key training function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [One Key] button to disable the training function.

## 16. FOLLOW TRAINING

Press [Follow] to enable the follow function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disable the training function.

## 17. ENSEMBLE TRAINING

Press [Ensemble] to enable the ensemble function, "LEARN", "SONG" and the song number will show on the display. Press "+" / "-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disable the training function.

## 18. TIMBRE

Press [Timbre] to enable the tone selection function. The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

## 19. RHYTHM

Rhythm selection:

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the display. Press the numeric keys or the "+" / "-" buttons to select other rhythms.

Rhythm enabling:

Press [Start/Stop] to start accomp rhythm. While in enable state: Press [Sync], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [Start/Stop] to stop the accomp rhythm.

Interlude:

After the accomp rhythm is activated, press [Fill-in] to have a temporary rhythm play during the accomp rhythm.

## 20. DEMO SONG

This keyboard has 24 stored demo songs ("000" to "023") for your selection. Press [Demo Song] and "SONG" will show on the display. The demo songs will start to play in order. During playing process, press [Demo Song] to play the next demonstration song. Press [Start/Stop] to stop playing. During the playing process, you can also press the num pad buttons or the "+" / "-" buttons to select other demonstration songs. The selected demonstration song will then play repeatedly.

## 21. NUM PAD

Numeric keys to enter an accurate value.

## 22. MASTER VOLUME

Press [Master Vol +] or [Master Vol -] to raise or lower the master volume. Press both simultaneously to reset to default value of "10".

### 23. ACCOMP VOLUME

Press [Accomp Vol +] or [Accomp Vol -] to raise or lower the accomp volume. Press both simultaneously to reset to default value of "10".

### 24. TEMPO

Press the tempo button to call up the tempo value, then use the number pad to enter the desired value. Use the [+] and [-] buttons to raise or lower tempo by 1 value. If tempo is defaulted to be 120 tempo/min, press [Tempo +] or [Tempo -] to increase or decrease the tempo speed. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.


### 25. PERCUSSIONS

This Keyboard provides 8 kinds of **panel** percussions. Press one of eight to play the corresponding percussion. Percussion instruments can be added to enhance the atmosphere as required.

### 26. CHORD ZONE

Chord key zone (1st-19th key from left).

## CONNECTIONS

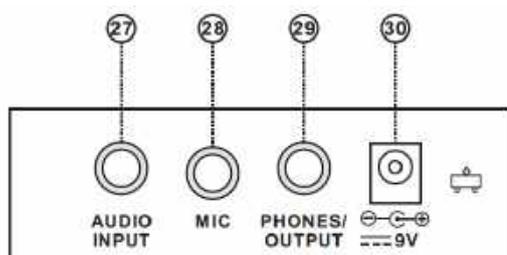

### 27. AUDIO INPUT

Turn off the keyboard and external audio device of choice. Connect one end of the audio cable to the INPUT port on the rear panel of the keyboard, connect the other end to the audio port of the device.

### 28. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.

### 29. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disenabled automatically. You can perform without disturbing others and other disturbing you.

### 30. DC 9V INPUT

Socket for plugging in the supplied power adapter.

## AUTO RHYTHM

### Rhythm selection

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the display. Press the number buttons or the "+"/"-" buttons to select other rhythms.

### Rhythm control

#### 1. Rhythm enabling

Press [start/stop] to start accomp rhythm. While in enable state, Press [Sync], "SYN" will show on the Display. Play any key in the chord key zone (the 1st-19th key, from left) and the accomp rhythm will be activated.

#### 2. Interlude

After the accomp rhythm is activated, press [Fill-in] to have a temporary rhythm play during the accomp rhythm.

#### 3. Stop rhythm

During the accomp rhythm, press [Start/Stop] the stop the accomp rhythm.

### Tempo adjustment

If tempo is defaulted to be 120 tempo/min, press [Tempo +] or [Tempo -] to increase or decrease the tempo speed. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

## EFFECT CONTROL

### Sustain function

Press [Sustain], "SUS" will show on the display. The sustain effect will be activated. Press this button again, "SUS" will disappear from the display. The sustain effect will be disenabled.

### Vibrato function

Press the [Vibrato] button, "VIB" will show on the display. The vibrato effect will be activated. Press this button again, "VIB" will disappear from the display. The vibrato effect will be disenabled.

## RECORDING AND RHYTHM PROGRAMMING

### Recording

Press [Record] to enable the recording function, "REC" will show on the display. In this mode all played notes will be recorded. When storage is full, "REC" will flash on the display and recording will stop automatically. Press [Play] to playback the recorded notes, "PLAY" will show on the screen. On completion of playback, "REC" will show on the display. You can record a new rhythm, or you can press [Play] to playback the recorded rhythm. Press [Start/Stop] or press [Record] again to disenable the recording function. All recorded rhythm will be removed.

### Rhythm programming

Press [Program] to enable the rhythm programming function, "PRG" will show on the screen and the keyboard percussion will be activated. In this mode, you can create custom rhythms by playing the corresponding percussion key. 32 percussions can be recorded at maximum, after that "PRG" will flash on the screen and programming will stop automatically. Press [Play] to playback the programming rhythm. Press [Start/Stop] or press [Program] again to disenable the programming function. All recorded rhythm will be removed.

## TRAINING METHODS

### Training I: One key

Press [One Key] to enable the single key training function, "LEARN", "SONG" and the song number will show on the display. Press "+"/="-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [Start/Stop] or press the [Single Key] button to disenable the training function.

### Training II: Follow

Press [Follow] to enable the follow function, "LEARN", "SONG" and the song number will show on the display. Press "+"/="-" button to select the song to be learned. With [Follow] training, you can learn by following the correct playing notes. You can also learn by following the notes shown on the display. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [Start/Stop] or press [Follow] to disenable the training function.

### Training III: Ensemble

Press [Ensemble] to enable the ensemble function, "LEARN", "SONG" and the song number will show on the display. Press "+"/="-" button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [Start/Stop] button or press [Ensemble] to disenable the training function.

## RECOMMENDED TRAINING APPS / GAMES

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from **PIANO DUST BUSTER**, **PIANO MAESTRO** and **SIMPLY PIANO**.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



### PIANO DUST BUSTER

**PIANO DUST BUSTER** is the ultimate introduction to piano for kids. No previous piano experience needed!



### PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



### SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

## PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (\*IOS compatible only!)



## PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. PIANO MAESTRO helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

### In addition you will

Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

### Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (\*IOS-IPAD compatible only!)



## SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(\* Compatible with both IOS and ANDROID devices)



## APPENDIX I. TIMBRE TABLE

000	Acoustic Grand Piano 1	064	Vibrato Piano 2	128	Acoustic Grand Piano 4	192	Acoustic Grand Piano 6
001	Music Box 1	065	Vibrato Music Box 2	129	Music Box 4	193	Music Box 5
002	Vibraphone 1	066	Vibrato Vibraphone 2	130	Vibraphone 5	194	Vibraphone 6
003	Accordion 1	067	Vibrato Accordion 1	131	Edge Accordion 5	195	Edge Accordion 7
004	Acoustic Bass 1	068	Vibrato Acoustic Bass 1	132	Acoustic Bass 5	196	Acoustic Bass 8
005	Electric Bass 1	069	Electric Bass 5	133	Electric Bass 6	197	Electric Bass 8
006	Violin 1	070	Edge Violin 3	134	Edge Violin 6	198	Edge Violin 8
007	Viola 1	071	Edge Viola 3	135	Edge Viola 6	199	Edge Viola 8
008	Cello 1	072	Edge Cello 3	136	Edge Cello 7	200	Cello 5
009	Orchestral Harp	073	Harp 4	137	Harp 8	201	Long Harp 4
010	String Ensemble 1	074	String Ensemble 2	138	Edge String 5	202	String Ensemble 8
011	Trumpet 1	075	Trumpet 2	139	Edge Trumpet 5	203	Trumpet 6
012	Synth Brass 1	076	Synth Brass 4	140	Edge Synth Brass 3	204	Synth Brass 9
013	Alto Sax 1	077	Alto Sax 3	141	Alto Sax 7	205	Alto Sax 10
014	Clarinet 1	078	Clarinet 3	142	Clarinet 7	206	Clarinet 10
015	Lead Square 1	079	Edge Square 3	143	Lead Square 6	207	Lead Square 9
016	Vibrato Piano 1	080	Long Piano 1	144	Long Piano 2	208	Long Piano 4
017	Vibrato Music Box 1	081	Long Music Box 1	145	Vibrato Music Box 5	209	Long Music Box 3
018	Vibrato Vibraphone 1	082	Long Vibraphone 1	146	Vibrato Vibraphone 4	210	Long Vibraphone 2
019	Edge Accordion 1	083	Accordion 2	147	Vibrato Accordion 3	211	Accordion 3
020	Acoustic Bass 2	084	Vibrato Acoustic Bass 2	148	Acoustic Bass 6	212	Acoustic Bass 9
021	Electric Bass 2	085	Vibrato E-Bass 1	149	Electric Bass 7	213	Long E-Bass 3
022	Edge Violin 1	086	Edge Violin 4	150	Edge Violin 7	214	Violin 6
023	Edge Viola 1	087	Edge Viola 4	151	Edge Viola 7	215	Viola 6
024	Edge Cello 1	088	Edge Cello 4	152	Edge Cello 8	216	Cello 6
025	Harp 1	089	Harp 5	153	Long Harp 1	217	Long Harp 5
026	Edge String 1	090	String Ensemble 3	154	String Ensemble 5	218	String Ensemble 9
027	Edge Trumpet 1	091	Trumpet 3	155	Edge Trumpet 6	219	Edge Trumpet 8
028	Edge Synth Brass 1	092	Synth Brass 5	156	Edge Synth Brass 4	220	Edge Synth Brass 5
029	Edge Sax 1	093	Alto Sax 4	157	Edge Sax 3	221	Alto Sax 11
030	Edge Clarinet 1	094	Clarinet 4	158	Edge Clarinet 3	222	Clarinet 11
031	Edge Square 1	095	Lead Square 3	159	Edge Square 4	223	Edge Square 5
032	Acoustic Grand Piano 2	096	Vibrato Piano 3	160	Acoustic Grand Piano 5	224	Acoustic Grand Piano 7
033	Music Box 2	097	Vibrato Music Box 3	161	Vibrato Music Box 6	225	Music Box 6
034	Vibraphone 2	098	Vibrato Vibraphone 3	162	Vibrato Vibraphone 5	226	Vibraphone 7
035	Edge Accordion 2	099	Vibrato Accordion 2	163	Edge Accordion 6	227	Edge Accordion 8
036	Acoustic Bass 3	100	Long Acoustic Bass 1	164	Acoustic Bass 7	228	Acoustic Bass 10
037	Electric Bass 3	101	Vibrato E-Bass 2	165	Long E-Bass 2	229	Long E-Bass 4
038	Edge Violin 2	102	Edge Violin 5	166	Violin 4	230	Violin 7
039	Edge Viola 2	103	Edge Viola 5	167	Viola 4	231	Edge Viola 9
040	Edge Cello 2	104	Edge Cello 5	168	Cello 3	232	Edge Cello 9
041	Harp 2	105	Harp 6	169	Long Harp 2	233	Harp 9
042	Edge String 2	106	String Ensemble 4	170	String Ensemble 6	234	Edge String 6
043	Edge Trumpet 2	107	Trumpet 4	171	Edge Trumpet 7	235	Edge Trumpet 9
044	Synth Brass 2	108	Synth Brass 6	172	Synth Brass 7	236	Synth Brass 10
045	Edge Sax 2	109	Alto Sax 5	173	Alto Sax 8	237	Alto Sax 12
046	Edge Clarinet 2	110	Clarinet 5	174	Clarinet 8	238	Clarinet 12
047	Edge Square 2	111	Lead Square 4	175	Lead Square 7	239	Lead Square 10
048	Acoustic Grand Piano 3	112	Vibrato Piano 4	176	Long Piano 3	240	Long Piano 5
049	Music Box 3	113	Vibrato Music Box 4	177	Long Music Box 2	241	Long Music Box 4
050	Vibraphone 3	114	Vibraphone 4	178	Vibrato Vibraphone 6	242	Long Vibraphone 3
051	Edge Accordion 3	115	Edge Accordion 4	179	Vibrato Accordion 4	243	Edge Accordion 9
052	Acoustic Bass 4	116	Long Acoustic Bass 2	180	Vibrato Acoustic Bass 3	244	Acoustic Bass 11
053	Electric Bass 4	117	Long E-Bass 1	181	Vibrato E-Bass 3	245	Electric Bass 9
054	Violin 2	118	Violin 3	182	Violin 5	246	Edge Violin 9
055	Viola 2	119	Viola 3	183	Viola 5	247	Edge Viola 10
056	Cello 2	120	Edge Cello 6	184	Cello 4	248	Edge Cello 10
057	Harp 3	121	Harp 7	185	Long Harp 3	249	Harp 10
058	Edge String 3	122	Edge String 4	186	String Ensemble 7	250	Edge String 7
059	Edge Trumpet 3	123	Edge Trumpet 4	187	Trumpet 5	251	Edge Trumpet 10
060	Synth Brass 3	124	Edge Synth Brass 2	188	Synth Brass 8	252	Edge Synth Brass 6
061	Alto Sax 2	125	Alto Sax 6	189	Alto Sax 9	253	Edge Sax 4
062	Clarinet 2	126	Clarinet 6	190	Clarinet 9	254	Edge Clarinet 4
063	Lead Square 2	127	Lead Square 5	191	Lead Square 8		

## APPENDIX II. RHYTHM TABLE

000	Disco	064	8 Beat Modern 1	128	Slow Soul 2	192	Ground Beat
001	Rock & Roll 1	065	Country Ballad 1	129	Bright Pop 1	193	Guad Dance
002	Rock & Roll 2	066	Hard Rock 1	130	Club Latin 2	194	Modern Cha Cha
003	Waltz	067	Hully Gully 1	131	Disco Chocolate 2	195	Merengue
004	Bossa Nova	068	Jive 1	132	Disco Fox 2	196	Pasodobl
005	Slow Rock 1	069	Love Song 1	133	Disco Funk 2	197	Rave
006	Slow Rock 2	070	Medium Jazz 1	134	Disco Hands 2	198	Sy Boogie
007	Slow Rock 3	071	ModernCountry Pop 1	135	Disco Latin 2	199	Seville
008	Slow Soul 1	072	Modern R&B 1	136	Disco Party 2	200	Big Band Ballad 2
009	16 Beat Pop	073	Pasodoble 1	137	Disco Samba 2	201	68 Beat Ballad 2
010	8 Beat Pop	074	Samba 1	138	Dixie Jazz 2	202	16 Beat Ballad 2
011	8 Beat Soul	075	Samba 2	139	Pop New Age 2	203	68 Beat Blues 2
012	8 Beat Rock	076	Schlager Rock 1	140	UK Pop 3	204	Show Tune 3
013	Rap Pop	077	Schlager Rock 2	141	USA March 2	205	Analog Ballad 3
014	Pop Rock	078	Tarantella 1	142	Club Dance 2	206	Salsa 3
015	60's Soul	079	Tijuana	143	Rumba 2	207	Jazz Rock 3
016	70's Soul 1	080	Electro Pop 1	144	8 Beat Modern 2	208	Jazz Beat 4
017	Straight Rock 1	081	Fusion 1	145	Country Ballad 2	209	Jazz Beat 3
018	Techno 1	082	Hip Shuffle	146	Hard Rock 2	210	Jazz Club 3
019	Techno 2	083	Limbo Rock 1	147	Hully Gully 2	211	Jazz Big Band 3
020	Funk	084	Acoustic Ballad 1	148	Jive 2	212	Pub Piano 3
021	Mambo 1	085	Piano Ballad 1	149	Love Song 2	213	Swing Beat 2
022	Mambo 2	086	R&B Ballad 1	150	Medium Jazz 2	214	Slow & Easy 3
023	Country 1	087	Rock Ballad 1	151	ModernCountryPop 2	215	Reggae 3
024	Country 2	088	Reggae 1	152	Modern R&B 2	216	Rock Ballad 3
025	16 Beat Shuffle	089	Slow & Easy 1	153	Pasodoble 2	217	R&B Ballad 3
026	8 Beat Adria 1	090	Swing Waltz	154	Samba 3	218	Piano Ballad 3
027	BigBandShuffle 1	091	Pub Piano 1	155	Samba 4	219	Acoustic Ballad 3
028	Big Band Middle 1	092	Jazz Big Band 1	156	Schlager Rock 3	220	Limbo Rock 3
029	Big Band Middle 2	093	Jazz Club 1	157	Schlager Alp 1	221	Hip Beat 2
030	Fast Band 1	094	Jazz Waltz 1	158	Tarantella 2	222	Fusion 3
031	Fast Band 2	095	Jazz Waltz 2	159	Tijuana Beat 1	223	Electro Pop 3
032	Bolero 1	096	Jazz Rock 1	160	Electro Pop 2	224	Tijuana Beat 2
033	Cat Groove 1	097	Salsa 1	161	Fusion 2	225	Tarantella 3
034	Classic Piano 1	098	Analog Ballad 1	162	Hip Beat 1	226	Schlager Alp 2
035	Cumbia 1	099	Show Tune 1	163	Limbo Rock 2	227	Schlager Rock 4
036	Club Pop	100	China Style	164	Acoustic Ballad 2	228	Samba 5
037	Latin Rock	101	Slow Rock 4	165	Piano Ballad 2	229	Samba 6
038	Ober Polka 1	102	Slow Rock 5	166	R&B Ballad 2	230	Pasodoble 3
039	Polka Pop	103	Slow Beat	167	Rock Ballad 2	231	Modern R&B 3
040	Twist	104	70's Soul 2	168	Reggae 2	232	Modern Country Pop 3
041	Unplugged 1	105	Straight Rock 2	169	Slow & Easy 2	233	Medium Jazz 3
042	Bluegrass 1	106	Techno 3	170	Swing Beat 1	234	Love Song 3
043	Bluegrass 2	107	Mambo 3	171	Pub Piano 2	235	Jive 3
044	Bluegrass 3	108	Country 3	172	Jazz Big Band 2	236	Hully Gully 3
045	Cha Cha	109	8 Beat Adria 2	173	Jazz Club 2	237	Hard Rock 3
046	Saturday Night 1	110	Big Band Shuffle 2	174	Jazz Beat 1	238	Country Ballad 3
047	Pop Ballad 1	111	Big Band Middle 3	175	Jazz Beat 2	239	8 Beat Modern 3
048	Pop Waltz	112	Big Band Middle 4	176	Jazz Rock 2	240	Rumba 3
049	UK Pop 1	113	Big Band Fast 1	177	Salsa 2	241	Club Dance 3
050	Club Latin 1	114	Big Band Fast 2	178	Analog Ballad 2	242	USA March 3
051	Disco Chocolate 1	115	Bolero 2	179	Show Tune 2	243	UK Pop 4
052	Disco Fox 1	116	Cat Groove 2	180	68 Beat Blues 1	244	Pop New Age 3
053	Disco Funk 1	117	Classic Piano 2	181	16 Beat Ballad 1	245	Dixie Jazz 3
054	Disco Hands 1	118	Cumbia 2	182	68 Beat Ballad 1	246	Disco Samba 3
055	Disco Latin 1	119	Funky Disco	183	Big Band Ballad 1	247	Disco Party 3
056	Disco Party 1	120	Latin Beat	184	West Shuffle	248	Disco Latin 3
057	Disco Samba 1	121	Ober Polka 2	185	Calypso	249	Disco Hands 3
058	Dixie Jazz 1	122	Unplugged 2	186	Casa	250	Disco Funk 3
059	Pop New Age 1	123	Saturday Night 2	187	Christon	251	Disco Fox 3
060	UK Pop 2	124	Pop Ballad 2	188	Detroit	252	Disco Chocolate 3
061	USA March 1	125	Bluegrass 4	189	Dance Pop	253	Club Latin 3
062	Club Dance 1	126	Bluegrass 5	190	Espag Nol	254	Bright Pop 2
063	Rumba 1	127	Bluegrass 6	191	Fast Gospel		

## TECHNICAL SPECIFICATION

---

Power Supply : 100-240VAC 50Hz  
Weight : 4,20 kg  
Dimensions : 860 x 322 x 104mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

### European Union

Tronios B.V.,  
Bedrijvenpark Twente Noord 18,  
7602KR Almelo, The Netherlands

2014/35/EU

2014/30/EU

2011/65/EC



### United Kingdom

Tronios Ltd.,  
130 Harley Street,  
London W1G 7JU, United Kingdom

S.I. 2016:1101

S.I. 2016:1091

S.I. 2012:3032





Specifications and design are subject to change without prior notice.

**[www.tronios.com](http://www.tronios.com)**

Copyright © 2022 by Tronios The Netherlands

# KEYNOTE STICKERS

Suitable for your electronic keyboard

**max**  
MUSIC

## Instructions

visit [www.tronios.com](http://www.tronios.com)

# INSTRUCTIONS / INSTRUCTIES / ANWEISUNGEN / INSTRUCCIONES / INSTRUCTIONS

## ENGLISH

### White key stickers:

Locate the numbers at the bottom of each sticker. Stick the #1 sticker on the leftmost white key of the keyboard. Place additional stickers moving from left to right, keeping the numbers in sequential order from 1 to 36 (for 61-key keyboard), 1 to 32 (for 54-keys keyboard) or 1 to 29 (for 49-keys keyboard).

### Black key stickers:

Locate the numbers at the bottom of each sticker. Stick the #1 sticker on the leftmost black key of the keyboard. Place additional stickers moving from left to right, keeping the numbers in sequential order from 1 to 25 (for 61 keys keyboard), 1 to 22 (for 54-keys keyboard) or 1 to 20 (for 49-keys keyboard).

## NEDERLANDS

### Witte toetsstickers:

Zoek de nummers aan de onderkant van elke sticker. Plak de eerste sticker op de meest linkse witte toets van het keyboard. Plak de overige stickers van links naar rechts en houd daarbij de volgorde aan van 1 tot 36 (voor een toetsenbord met 61 toetsen), 1 tot 32 (voor een toetsenbord met 54 toetsen) of 1 tot 29 (voor een toetsenbord met 49 toetsen).

### Zwarte toetsstickers:

Zoek de nummers aan de onderkant van elke sticker. Plak de eerste sticker op de meest linkse zwarte toets van het keyboard. Plak de overige stickers van links naar rechts, in de volgorde 1 tot 25 (voor een toetsenbord met 61 toetsen), 1 tot 22 (voor een toetsenbord met 54 toetsen) of 1 tot 20 (voor een toetsenbord met 49 toetsen).

## DEUTSCH

### Weißer Tastenaufkleber:

Suchen Sie die Zahlen auf der Unterseite jedes Aufklebers. Kleben Sie den Aufkleber mit der Nummer 1 auf die ganz linke weiße Taste der Tastatur. Bringen Sie weitere Aufkleber von links nach rechts an, wobei Sie die Zahlen in der Reihenfolge von 1 bis 36 (bei einer Tastatur mit 61 Tasten), 1 bis 32 (bei einer Tastatur mit 54 Tasten) oder 1 bis 29 (bei einer Tastatur mit 49 Tasten).

### Schwarze Tastenaufkleber:

Suchen Sie die Zahlen auf der Unterseite jedes Aufklebers. Kleben Sie den Aufkleber mit der Nummer 1 auf die ganz linke schwarze Taste der Tastatur. Bringen Sie weitere Aufkleber von links nach rechts an, wobei Sie die Zahlen in der Reihenfolge von 1 bis 25 (bei einer Tastatur mit 61 Tasten), 1 bis 22 (bei einer Tastatur mit 54 Tasten) oder 1 bis 20 (bei einer Tastatur mit 49 Tasten) anordnen.

## ESPAÑOL

### Pegatinas de teclas blancas:

Localiza los números en la parte inferior de cada pegatina. Pegue la pegatina nº 1 en la tecla blanca más a la izquierda del teclado. Coloque las pegatinas adicionales moviéndose de izquierda a derecha, manteniendo los números en orden secuencial del 1 al 36 (para el teclado de 61 teclas), del 1 al 32 (para el teclado de 54 teclas) o del 1 al 29 (para el teclado de 49 teclas).

### Pegatinas de teclas negras:

Localice los números en la parte inferior de cada pegatina. Pegue la pegatina nº 1 en la tecla negra más a la izquierda del teclado. Coloque las pegatinas adicionales moviéndose de izquierda a derecha, manteniendo los números en orden secuencial del 1 al 25 (para el teclado de 61 teclas), del 1 al 22 (para el teclado de 54 teclas) o del 1 al 20 (para el teclado de 49 teclas).

## Français

### Autocollants pour les touches blanches :


Repérez les numéros au bas de chaque autocollant. Collez l'autocollant n° 1 sur la touche blanche la plus à gauche du clavier. Placez les autres autocollants de gauche à droite, en respectant l'ordre séquentiel des numéros de 1 à 36 (pour un clavier de 61 touches), de 1 à 32 (pour un clavier de 54 touches) ou de 1 à 29 (pour un clavier de 49 touches).

### Autocollants pour les touches noires :


Repérez les numéros au bas de chaque autocollant. Collez l'autocollant n° 1 sur la touche noire la plus à gauche du clavier. Placez les autres autocollants de gauche à droite, en respectant l'ordre séquentiel des numéros de 1 à 25 (pour un clavier de 61 touches), de 1 à 22 (pour un clavier de 54 touches) ou de 1 à 20 (pour un clavier de 49 touches).



61 KEY

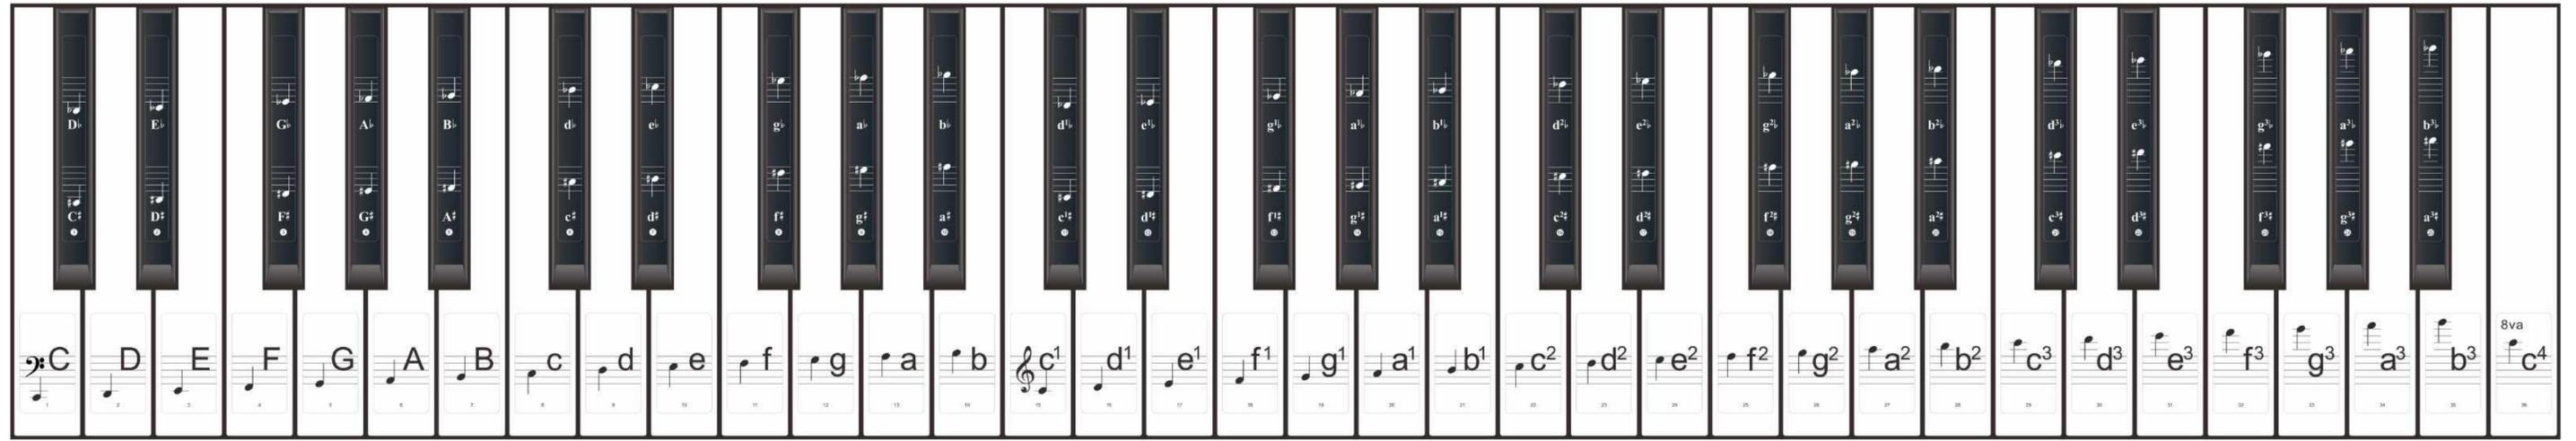

54 KEY

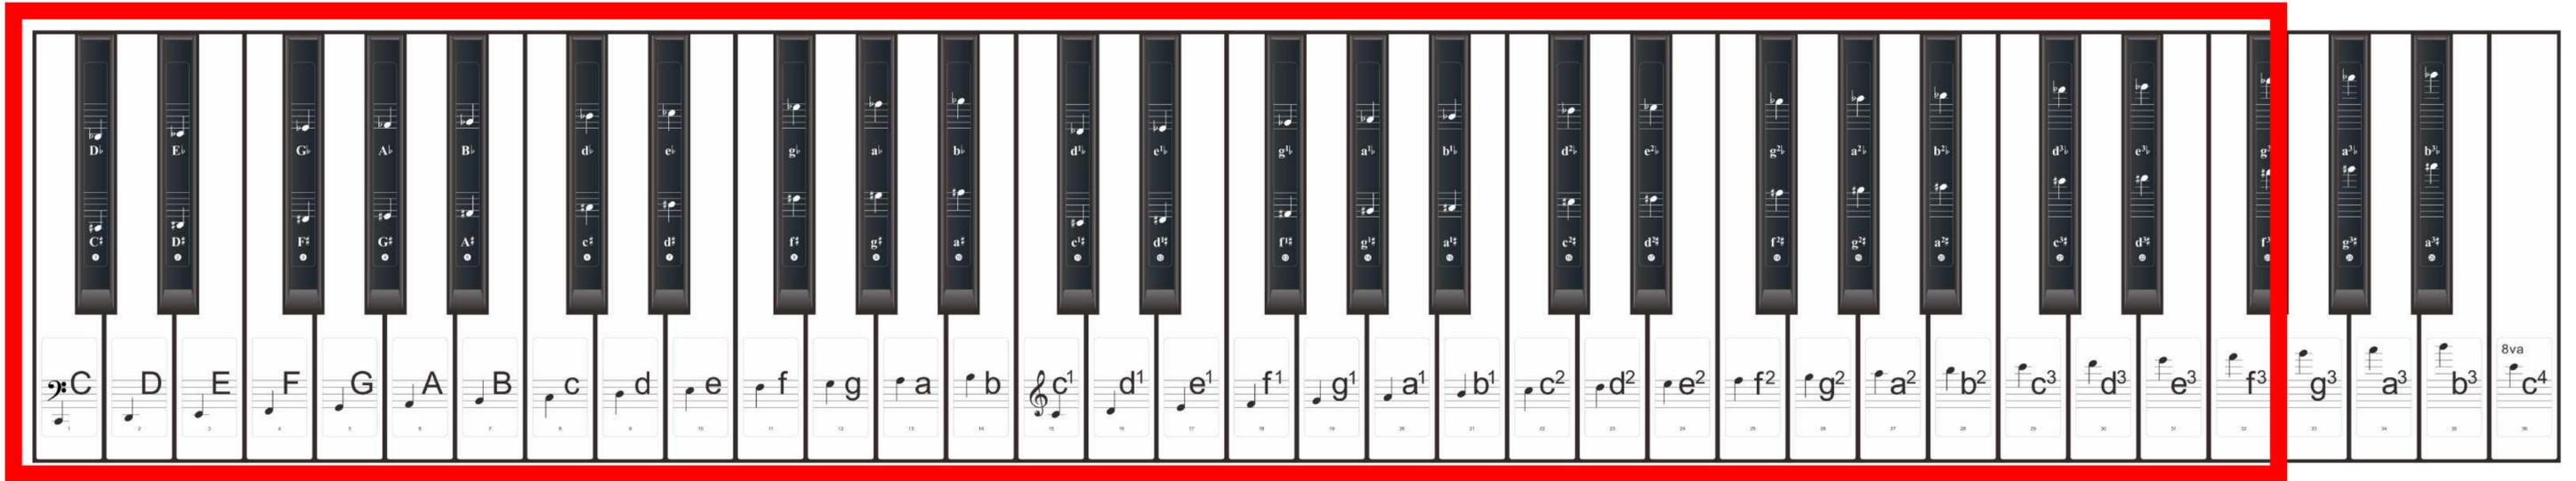

49 KEY

