



BEAMZ
MADE
EAZY

150.588 V.1.1

BBP90 UPLIGHT PAR
QUICK **START GUIDE**

REMOTE CONTROLLER

BLACK OUT

1. Press **<BLACK OUT>** off existing modes.
2. Press any colour button to turn the lights on again.

AUTO

Automatic mode will enable you to run the automatic light programs. To turn on automatic mode:

1. Press **<AUTO>** on the remote controller. Display shows **"FF99"**.
2. Press **<+>** or **<->** to choose between the different auto programs.
3. Press **<AUTO>** again to turn off the auto mode.

SOUND

Sound mode will enable the product to respond to the music. To turn on sound mode:

1. Press **<SOUND>** on the remote controller.
2. Press **<SENSITIVITY>** and then press **<+>** or **<->** to increase or decrease the sound sensitivity.
3. Press **<SOUND>** again to turn off the sound mode.

STROBE

Activate the strobe function in automatic or sound mode.

1. Press **<STROBE>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of strobe.
3. Press **<STROBE>** again to turn off the strobe.

SPEED

No function

SENSITIVITY

To adjust sound sensitivity for in sound mode.

1. Press **<SENSITIVITY>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease sound sensitivity.
3. Press **<SENSITIVITY>** again to turn off the sensitivity mode.

%

Select colour gradual change mode.

1. Press **<%>** on the remote controller. Display shows **"CC00"**.
2. Press **<+>** or **<->** to either increase or decrease speed of the program.
3. Press **<%>** again to turn off the gradual change mode.

MANUAL

Select one of eight static colours.

1. Press **<MANUAL>** on the remote controller. Display shows **"AU01"**.
2. Press **<+>** or **<->** to choose your static colour.
3. Press **<MANUAL>** again to turn off the manual mode.


FADE

To adjust the fade speed of the automatic program, the sound active program and the manual mode.

1. Press **<FADE>** on the remote controller. Display shows **"EE00"**.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.
3. Press **<FADE>** again to turn off the fade mode.

R,G,B,UU AND NUMBER 1~9

1. Select static colour with the buttons **<R>**, **<G>**, ****, **<UU>** or digit **<1>** to **<9>**.
2. Press **<+>** or **<->** to either increase or decrease brightness.

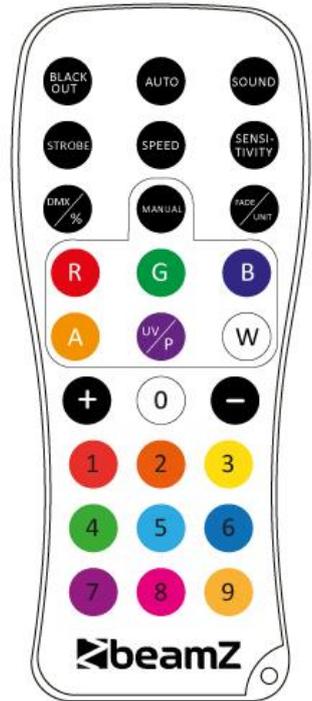


CONTROL MENU

MENU		DESCRIPTION
A001	001-512	DMX address setting
U_100	000-100	Battery level indicator
IRYE	yE	Turn on the remote control function
	no	Turn off the remote control function
0255	000-255	Master dimmer 0-100%
R255	000-255	Red dimmer 0-100%
G255	000-255	Green dimmer 0-100%
B255	000-255	Blue dimmer 0-100%
U255	000-255	UV dimmer 0-100%
F255	010-255	Strobe speed from slow to fast
CL01	01-08	Static colour selectable
CC01	00-99	Colour jumping,
DE01	00-99	Colour gradual change, speed from slow to fast
CP01	00-99	Colour pulse change, speed from slow to fast
SUN9	0-9	Sound control, sensitivity from high to low



DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Master dimmer	000-255	Dim all, From dark to bright
2	Colour	000-255	Red 0-100%, from dark to bright
3		000-255	Green 0-100%, from dark to bright
4		000-255	Blue 0-100%, from dark to bright
5		000-255	UV 0-100%, from dark to bright
6	Strobe	000-009	No function
		010-255	Strobe from slow to fast
7	Function	000-050	No function
		051-100	8 kinds of colour output
		101-150	Colour jumping
		151-200	Colour gradual change
		201-250	Colour pulse change
		251-255	Sound control

RJ45 TO DMX CABLE

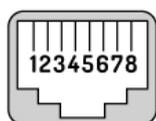

RJ45

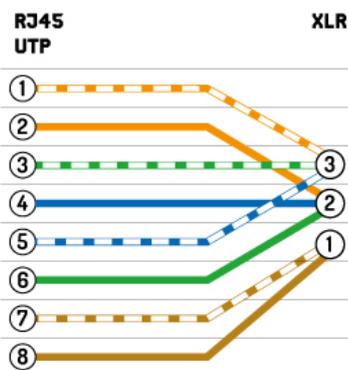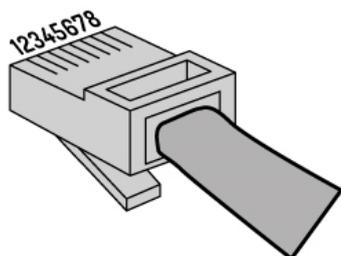



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.





150.048 **beamZ**

AC470 Soft Case 4 uplights BBP90

The AC-470 Soft Case is specially designed to protect and extend the life of mobile uplights. It fits other products and accessories as well. Constructed of rugged black 600D polyester and nylon for maximum protection.

Product colour : Black
Dimensions: Internal : 110 x 110 x 75mm (fixtures) 70 x 230 x 75mm (accessories)
Dimensions (L x W x H) : 370 x 280 x 100mm
Weight (kg) : 0,40

- Quality protection for mobile uplights BBP90
- 4 compartments to individually store the uplight
- Additional compartment for storing Cables and other Accessories
- Saves valuable transport space by allowing fixtures to be stacked without having to be boxed
- Affordable padded soft case