



BEAMZ
MADE
EAZY

150.433 V1.0

COBRA 100 SPOT
QUICK START GUIDE

CONTROL MENU

MENU		DESCRIPTION
A.001	A001-A512	DMX address
N.DNH	N.dNH	DMX Mode
	N.AUt	Auto Mode
	N.rnd	Random Mode
	N.SOU	Sound Control
SET	CH.14	14CH
	Sd.00-Sd.99	Sound Sensitive
	rP.On\OF	Pan Reverse(rP.On: Reverse, rP.OF: Forward) (Default OFF)
	rt.On\OF	Tilt Reverse(rT.On: Reverse, rT.OF: Forward) (Default OFF)
	dS.On\OF	Display LED, dS.OF: Display always on, dS.On: Display off after 30s (Default On)
	18.OF\On	Display Reverse(180°) 18.On: Reverse, 18.OF: Forward (Default OFF)
	LdF.y\LdF.n	Restore to factory set(LdF.y: Restore, LdF.n: No Restore)
INFO	n.000-n.255	DMX Value Monitoring(Show current DMX Value, n is DMX Channel)
	L.000-L.122	Current LED Temperature(L.255: No connect to temperature control wire)
	11.00	Sensor Monitoring(Corresponding to HRX(Pan), HRY(Tilt), HRI(Gobo), HR2(Focus) Real-time status, 0 is detected)
REST	NO	
	YES	Reset

DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	PAN	000-255	Pan 0-540 degree move
2	PAN FINE	000-255	Pan Fine
3	TILT	000-255	Tilt 0-190 degree move
4	TILT FINE	000-255	Tilt fine
5	PT SPEED	000-255	Speed from fast to slow
6	DIMMER	000-255	0-100% linear dimmer from dark to brighter
7	STROBE	000-003	No Function
		004-251	Strobe from slow to fast
		252-255	No Function
8	COLOR	001-015	White
		016-031	Color 1
		032-047	Color 2
		048-063	Color 3
		064-079	Color 4
		080-095	Color 5
		096-111	Color 6
		112-127	Color 7
		128-255	Color Wheel clockwise rotate from slow to fast
9	GOBO	000-009	White
		010-019	Gobo 1
		020-029	Gobo 2
		030-039	Gobo 3
		040-049	Gobo 4
		050-059	Gobo 5
		060-129	Gobo Wheel clockwise rotate from fast to slow
		130--134	Stop
		135-230	Gobo Wheel counter-clockwise rotate from slow to fast
		231-235	Gobo 1 shake from slow to fast
		236-240	Gobo 2 shake from slow to fast
		241-245	Gobo 3 shake from slow to fast
		246-250	Gobo 4 shake from slow to fast
		251-255	Gobo 5 shake from slow to fast
10	GOBO ROTATE	000-063	Gobo position
		064-127	Gobo clockwise rotate from slow to fast
		128-190	Gobo clockwise rotate from fast to slow
		191--192	Stop
		193-255	Gobo counter-clockwise rotate from slow to fast
11	FOCUS	000-255	0%-100% Focus
12	PRISM	000-127	Prism Off
		128-255	Prism On
13	MACRO FUNCTION	000-009	CH1-CH12 is valid
		010-29	Pan/Tilt Slow Running
		030-049	Slow Auto Running
		050-069	Fast Auto Running
		070-255	Sound Control
14	RESET	000-250	No Function
		251--255	All reset after 5s



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.



BEAMZLIGHTING.COM