



ACOUSTICS

E300A

USER GUIDE

For model QI0300

Contents

- Important Safety Information and Warnings2
- Introduction4
- Package Contents4
- Feature Summary5
- Ceiling Positioning and First Fix Installation6
- Wiring Two Pairs of Speakers9
- Connecting the System and Powering On10
- Testing the System10
- Setting up E300A for Internet and Amazon Alexa11
- Playing Audio via Voice Control11
- Playing Audio via AirPlay12
- Playing Audio via Multi-Room Media (MRM)12
- Playing Audio via Spotify Connect12
- Playing Audio via Bluetooth13
- Playing Audio via TIDAL13
- Playing Audio via AUX Analogue13
- Playing Audio via AUX Optical13
- Connecting and Using a Local Input Module (LIM)14
- E300A Buttons15
- Remote Control16
- LED States17
- Resetting the WiFi20
- Factory Reset20
- Specification21
- Warranty22

Important Safety Information and Warnings

1 - Notices

1.1 - FCC Statement (for US Customers)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

1.2 - FCC Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CAUTION: Any Changes or modifications not expressly approved by Q Acoustics could void the user's authority to operate the equipment.

1.3 - Industry Canada Statement (for Canadian Customers)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1.4 - Bluetooth

This unit contains a Class 2 Bluetooth transmitter working at 2.4GHz.

2 - Safety Information and Warnings

2.1 - Moisture

- To reduce the risk of fire or electric shock, **DO NOT expose this apparatus to:** rain, moisture, dripping or splashing.
- **DO NOT** use this apparatus near water.

2.2 - Remote Control Batteries

The remote control supplied with this unit contains a battery. To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

- Install the battery correctly, + and - as marked on the unit.
- Remove the battery when the unit is not used for a long time.
- **DO NOT** expose the battery or remote control to excessive heat, including sunshine.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING - DO NOT INGEST BATTERY - CHEMICAL BURN HAZARD.**
- If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

2.3 - Disposal of Batteries

The battery supplied contains perchlorate material and in many areas batteries may not be disposed of with your household waste. Please ensure you dispose of batteries according to local regulations.

The battery supplied **DOES NOT** contain the heavy metals mercury or cadmium.

2.4 - Servicing

Servicing is required when the unit or mains cord has been damaged in any way, liquid has been spilled or objects have fallen into the apparatus, the device has been exposed to rain or moisture, it does not operate normally, or has been dropped.

Refer all servicing to qualified service personnel.

3.0 - Symbols used on this product



High Voltage Hazard Symbol

This symbol indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please **DO NOT REMOVE** the product covering.



Hazard Warning Symbol

The 'exclamation mark' calls attention to features for which you should read this manual closely to prevent operation and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and object filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.



Waste Electrical and Electronic Equipment Symbol

This symbol indicates that when the unit is to be discarded, it **MUST BE SEPARATED** from other household-type waste and sent to separate collection facilities for recovery and recycling of electrical and electronic equipment.

Please make sure you are familiar with your local rules on the separate collection of electrical and electronic products.

Introduction


Thank you for purchasing this Q Acoustics E300A Alexa Ceiling Amplifier.

This manual is intended to take you through setup and installation and will help provide optimum performance from the product.

Please read the instructions, important safety information and warnings carefully before installation and use, to ensure the safe and satisfactory operation of this product.

The Q Acoustics E300A amplifier combines exceptional stereo sound performance with convenient voice control and unique installer friendly connectivity.


Package Contents

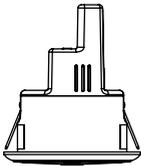


1 x E300A Unit




1 x Remote Control

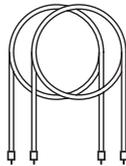

2 x 4m Speaker Cable

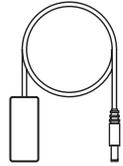


1 x Power Supply

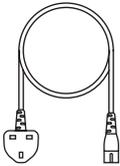

1 x UK Power Cable*



1 x EU Power Cable*

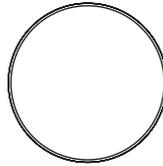


1 x Cutout Template




2 x AAA Batteries



1 x User Guide



2 x Speaker Plugs



1 x Optical Mini
TOSLINK Adapter

** Power Cable(s) supplied may vary depending on market version.*

Feature Summary

Wired Connectivity:

Analogue audio input – 3.5mm stereo jack allows a connection to an external analogue audio source such as a CD player.

Optical digital input - Mini TOSLINK allows connection to an external digital audio source such as a TV.

Speaker output – Stereo sockets, allowing connection to passive speakers.

Local Input Module (LIM) – RJ45 socket used exclusively with the LIM allowing remote audio connections via a CAT5/6 data cable.

Ethernet – RJ45 socket used to connect a wired internet connection from a broadband router.

DC Power – Plug the output of the supplied power supply here to power the unit.

Wireless Connectivity:

Bluetooth® – An international wireless connection used for streaming audio from all compatible devices.

WIFI – A wireless connection for internet



Fire Rating:

60 minute – E300A is tested to EN 1365-2 and EN 1363-1 and will provide a fire barrier in the ceiling for 60 minutes.


Ceiling Positioning and First Fix Installation

The E300A is designed to be fitted into the ceiling using:

102mm Diameter Cutout


135mm Depth

It is recommended that the unit is positioned centrally in the room in order to give equal voice control performance throughout. Typical rooms will only require one pair of speakers with a distance of 1.0 – 2.5m from each speaker to the E300A. Larger open plan rooms may require 2 pairs of speakers with up to 3.0m from each speaker to the E300A.

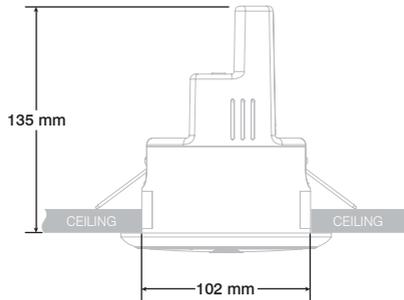


E300A mounted in a ceiling will have a typical height of 1.8m or greater

Single Room with Two Speakers (e.g.):

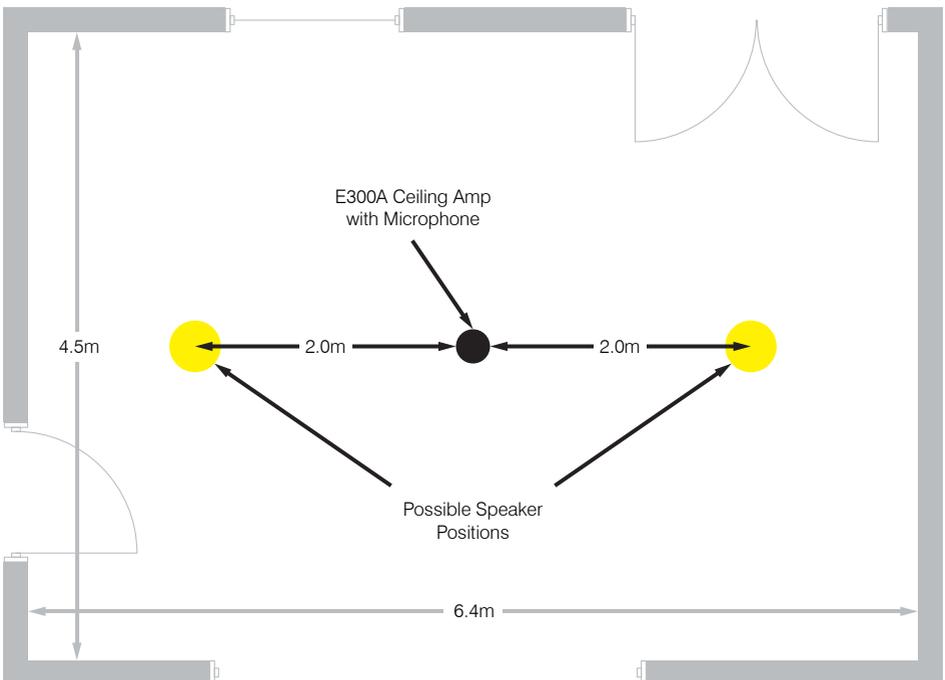

Open Plan Room with Four Speakers (e.g.):

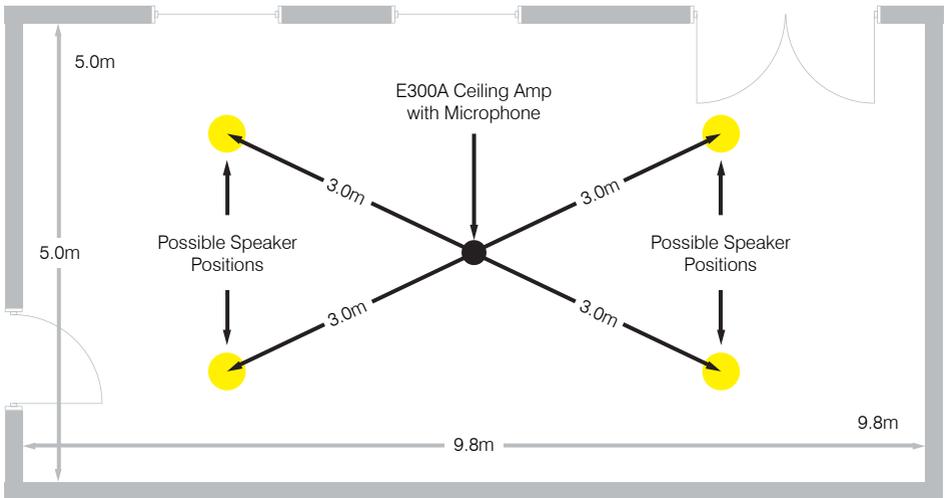


Ensure the cutout AVOIDS CEILING JOISTS.

E300 is certified to EN 1365-2 and EN 1363-1 providing a 60 minute fire barrier.

DO NOT install directly above a shower or bath.

A permanent live and neutral supply is required to connect the power supply.

1. Make a 102mm diameter hole in the ceiling for the main E300A Amplifier.
2. Run speaker cable (16/2 recommended) from the E300A position to the left and right speaker positions.
3. Run an optional CAT 5/6 data cable from the E300A position to a wired internet router or switch.
4. Run an optional CAT 5/6 data cable from the E300A position to a TV point (RJ45 socket recommended) for a LIM, to connect AUX or TV sound if required.
5. Run an optional Analogue or Optical cable to AUX input (if not using LIM)
6. Use an electrician to wire in the E300A power supply to a live supply or plug into a mains socket if available.

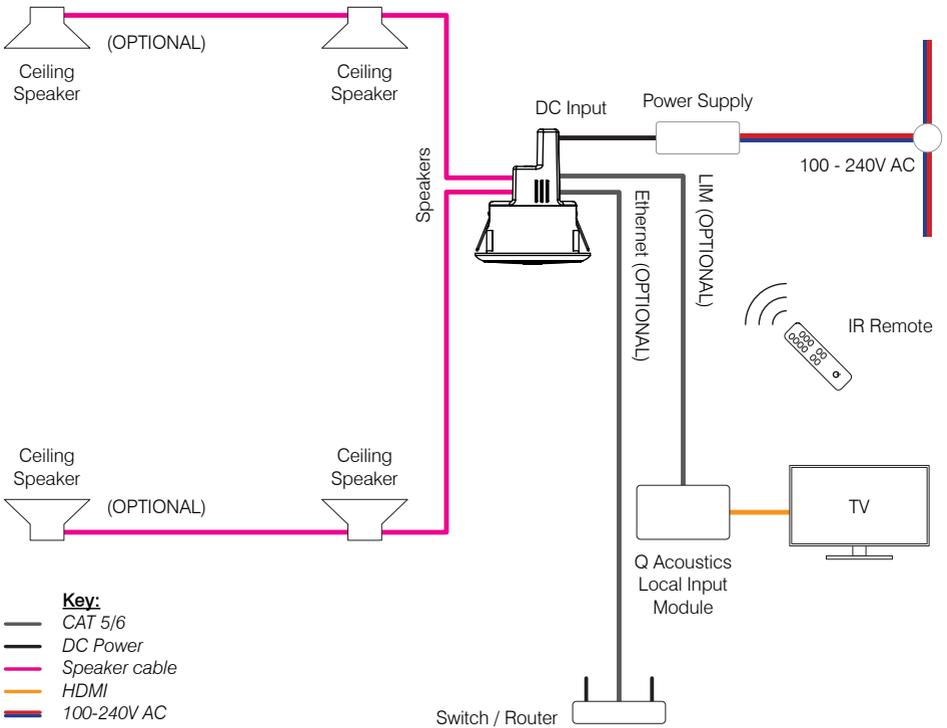


The diagram above shows typical wiring layout using two pairs of ceiling speakers, wired internet and optional Local Input Module (LIM) for TV sound.

Wiring Two Pairs of Speakers

For larger open plan areas, two pairs of Speakers can be used to achieve an even distribution of sound. A Speaker wire (purchased separately) should be fitted between the First Speaker and the Second, for both Left and Right as shown in the diagram.


The Speakers **MUST** be Connected in **SERIES** - where the Negative (BLACK) connector of the First Speaker is connected to the Positive (RED) connector of the Second. The Negative (BLACK) connector of the Second Speaker is then connected to the Negative (BLACK) cable to the E300A unit using a connector block, as shown in the diagram. This series method of connecting two speakers will ensure a high quality and reliable sound performance.

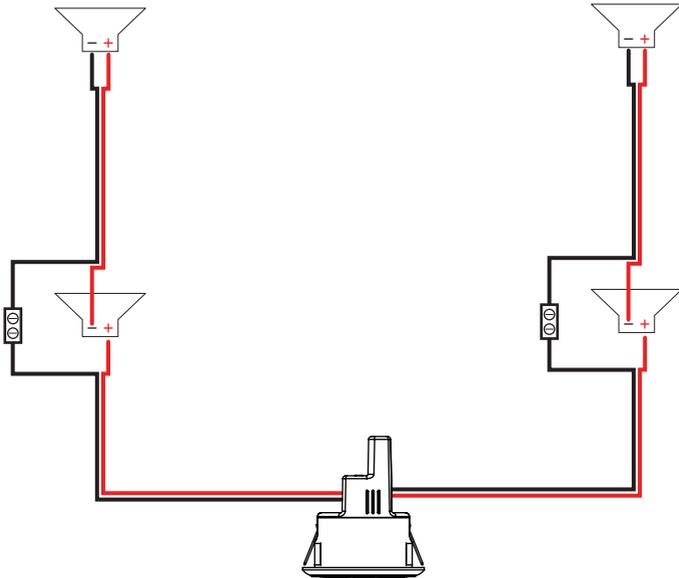

Connecting the System and Powering On

Once you have first fixed the cables, and made the correct ceiling cut-outs, the system can be plugged in and switched on.

1. Terminate the speaker cables to the speakers, and then the green speaker connectors supplied with the E300A.
2. (Optional) Terminate CAT 5/6 data cables for internet or LIM with RJ45 plugs using TIA-568B wiring standard, shown below. Use a continuity test to ensure all conductors are connected correctly.

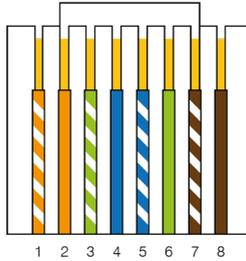

3. (Optional) If not using LIM, plug in AUX cable (3.5mm stereo jack for Analogue, mini TOSLINK for Optical)
4. Plug in power supply and power on.
5. Test the system (see section below).
6. Fit the E300A into the ceiling.

Testing the System

You should test the system briefly before pushing the main unit into the ceiling. E300A will work without internet or account by using Bluetooth, AUX or LIM.

Bluetooth test:

1. Select the Bluetooth input using the remote control and pair and connect a BT device such as a smart phone.
2. Play some audio from the BT device.
3. Check that all speakers are working and are in phase (the bass sound should be central between the left and right speaker).

AUX test:

1. Plug in a stereo jack to jack cable between E300A and a device with a 3.5mm stereo headphone output.
2. Select the AUX input using the remote control.
3. Play some audio from the source device.
4. Check that all speakers are working and are in phase (the bass sound should be central between the left and right speaker).

LIM test:

1. Connect the HDMI LIM to E300A using a fully terminated Cat5 or Cat6 cable.
2. Plug in a stereo jack to jack cable between the LIM and a device with a 3.5mm stereo headphone output.
3. Select the AUX input using the remote control.
4. Play some audio from the source device.
5. Check that all speakers are working and are in phase (the bass sound should be central between the left and right speaker).

Once you are happy that all speakers play sound correctly, and a connected LIM is working then push the main E300A unit fully into the ceiling.

Setting up E300A for Internet and Amazon Alexa

Once speakers are connected and the unit is powered on you can proceed to configure E300A to connect to WIFI (if not using wired internet), set a zone name and also connect to your Amazon Alexa account to enable voice-controlled services.

Configure WIFI:

1. Download the Q Net App onto your device from the App Store or Google Play.
2. Ensure your device running the app is connected to your WIFI.
3. Open up the App, then select 'Add', the App will discover E300 systems in WIFI setup mode and be listed.
4. Select the E300 system, it will play a sound through the speakers. If you hear the sound press 'Yes'
5. E300 will perform a WIFI Scan, when complete use the drop down to select the desired WIFI name, then enter the password.
6. Once E300 is connected to WIFI, it will ask to add your Amazon account, you can proceed to add the account name and password.

Add Amazon Alexa account:

1. If you wish to add or edit the Amazon Alexa account, open up the app and select the E300 you wish to change
2. Press the settings button 'cog wheel' and then select 'Amazon Alexa', you can now add or logout the account.

Playing Audio via Voice Control

E300A is a fully activated Alexa voice control device and will react to your voice in the same way as other Alexa voice-controlled devices. When you have made your voice selection, the LED ring will illuminate WHITE. Here are some example commands:

- | | |
|-------------------------------|---------------------------------------|
| 1. "Alexa, play BBC Radio 1" | - System will play BBC Radio 1 |
| 2. "Alexa, volume 6" | - System will adjust to volume = 6/10 |
| 3. "Alexa, stop" | - System will stop playing radio |
| 4. "Alexa, what is the time?" | - Alexa will state the time |

Using the Alexa wake up work will always override any audio currently playing including AUX or LIM. If you simply ask Alexa a question then the previous input will continue, if you request new music via Alexa then this will override the previous selection or input.

Playing Audio via AirPlay

E300A can be used with Airplay devices:

Airplay connection Guide:

1. Unlock your device
2. Open your 'Control Center' page
3. Select this symbol: 
4. Press on the 'E300A' or its customised name to select and play through the speaker

You can connect multiple devices by repeating the guide shown above and selecting another AirPlay device.

You can use the remote control to alter the volume, or simply ask Alexa to set the volume:

"Alexa, volume 3" - Alexa will set the volume = 3/10

A paired device can connect and play audio without the need to select any Input Source, simply select E300A in your iOS/macOS device list, connect, and play audio.

Playing Audio via Multi-Room Media (MRM)

Establishing MRM with Alexa Devices:

Playing Music/Media on Different Devices Simultaneously:

1. Unlock your iOS/Android
2. Download 'Amazon Alexa' App
3. Sign into application
4. Select 'Devices' Tab
5. Create two or more 'Groups' by Names Given or customised name
6. Choose E300A systems as well as other Compatible Devices with Amazon for each 'Group'
7. Say "Alexa" to 'Awaken' the device
8. Say and specify what Media you wish to play and in which 'Group' should produce the audio (e.g. "Play Black Sabbath in living space")
9. Repeat Step 7
10. Repeat Step 8 but specify a different 'Group' (e.g. "Play Audible on first floor")

Playing Audio via Spotify Connect

Once E300A is connected to the internet you can use the Spotify App to select it from the device list, it will be listed as a 'Spotify Connect' speaker named E300A or a name you have given. Simply select this and then browse and play music in the normal way, using the Spotify App to control the volume.

If you register your Spotify account with Alexa, then you can also use voice commands to play music. Once you make Spotify your default music player, simply ask Alexa to play your choice.

Playing Audio via Bluetooth

You must first 'pair' your Bluetooth device to E300A using the following steps:

1. Press the Bluetooth input on the remote control or Q Net App, E300A will enter Bluetooth pairing mode and the LED ring will flash BLUE.
2. You can now pair your Bluetooth device, go to Bluetooth settings and select E300A, or your set friendly name to pair and connect the device, you must do this within 60s.
3. You can now play audio from your device and control the volume.

You can pair multiple devices using this process, remember once the Bluetooth input is selected you have 60s to pair.

A paired device can connect and play audio without the need to select the Bluetooth Input, simply select E300A in your Bluetooth device list, connect, and play audio.

Playing Audio via TIDAL

Play a song and tap on the 'Now Playing Bar. Tap on the device selector at the top right. Choose E300 as the TIDAL connect enabled device.

Playing Audio via AUX Analogue

Use the 3.5mm stereo jack socket to connect your Analogue audio source directly to E300A . Press the AUX input button on the Remote Control to select this input, the LED ring will illuminate PINK.

You can use the remote control to alter the volume, or simply ask Alexa to set the volume:

"Alexa, volume 3" - Alexa will set the volume = 3/10

Playing Audio via AUX Optical

Use (recommended) OPTICAL to mini TOSLINK plug to connect your Optical digital audio source directly to E300A . Press the AUX input button on the Remote Control to select this input the LED ring will illuminate PINK.

You can use the remote control to alter the volume, or simply ask Alexa to set the volume:

"Alexa, volume 3" - Alexa will set the volume = 3/10

Connecting and Using a Local Input Module (LIM)

The Local Input Module (LIM) is a convenient way to connect a remote source such as a TV to E300A via a CAT 5/6 data cable from the source to E300A. Once the cable has been terminated and verified, simply plug the LIM into the LIM RJ45 socket on the E300A, the LIM will receive power and indicate this on the RJ45 socket LED's.

The LIM has HDMI, Optical and Analogue inputs, HDMI ARC is recommended for TV sound, use a HDMI cable to connect the HDMI ARC or eARC socket from the TV to the LIM. Set the TV audio output to PCM stereo, as the LIM does not contain a Dolby Digital decoder. Sometimes you may also need to set the TV speaker output as 'HDMI ARC' or sometimes called 'Amplifier system'. You will then be able to use the TV remote control to switch on the TV, which in turn will switch E300 to the AUX input (pink LED), and also use the TV remote to control the volume. You can also use the E300 remote control to alter the volume, or simply ask Alexa to set the volume:


"Alexa, volume 3" - Alexa will set the volume = 3/10

If you use the LIM with an optical or analogue source you must manually select the AUX input on E300, press the AUX input button on the remote control, the LED ring will illuminate PINK. You can use the remote control to alter the volume, or simply ask Alexa to set the volume.

The LIM is supplied with a plug in Infra-Red receiver, which can be attached on or under the TV allowing additional remote control of volume, pointing a remote control at the TV rather than the ceiling. The supplied E300 remote control can be used, or any programmable remote control using the IR codes set out below.

Function	IR Code RC5	
	System	Command
Standby	16	012
Mute	16	013
Volume Up	16	016
Volume Down	16	017
BT Input	16	002
AUX / TV	16	005
Play / Pause	27	053
Stop	27	054
Skip Forwards	27	052
Skip Back	27	050
LIM Analogue	27	067
LIM Digital	27	068
LIM Auto	27	069

E300A Buttons

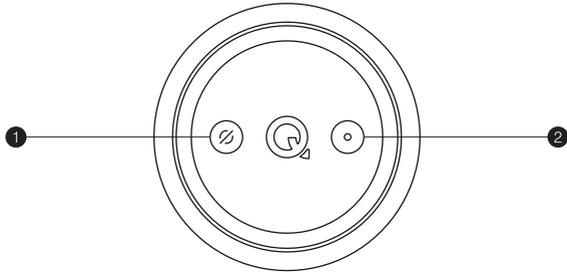

- 1. MIC MUTE – Mutes/Unmutes the microphone.
- 2. FUNCTION –

A Single Press

- Awaken 'Alexa' - Voice Commands Activation

A Long Press +5s


- Press for more than 5s will put the E300A into WIFI setup mode, you can then use the Q Net App to join E300A with a different WIFI

- 3. FUNCTION + MIC MUTE –

Press and Hold

- Press and hold both FUNCTION and MIC MUTE for 5s for Factory Reset. This will reboot the system, disconnects and clears the connections with: WIFI, Amazon Alexa Account, Bluetooth Paired Devices and Customised Name (Device will be rebooted as E300A)

Remote Control

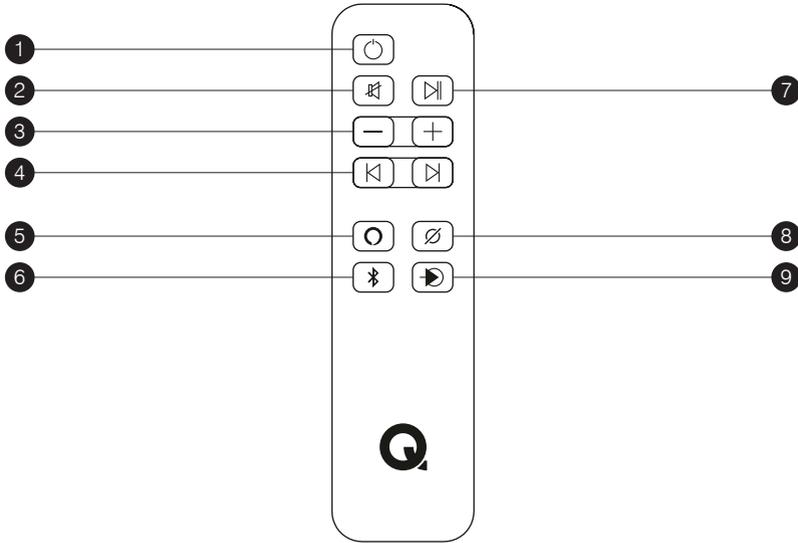


1. STANDBY – Press to STOP the current source playing and enter standby.
- Press and hold for 5s to reboot E300.
2. MUTE – Press to MUTE / UNMUTE the audio.
3. VOLUME +/- – Press to adjust the speaker volume.
4. SKIP |◀ / ▶| – Press to SKIP tracks.
5. ALEXA WAKE – Press to wake 'Alexa' for voice commands.
- Press and hold for 5s to enter WIFI setup mode, use the Q Net App to join E300A with a new WIFI
6. BLUETOOTH – Press to select the Bluetooth input.
7. PLAY / PAUSE ▶|/|| – Press to Play / Pause the audio (Bluetooth and Network sources ONLY).
8. DO NOT DISTURB – Press to MUTE / UNMUTE the microphone.
9. INPUT – Press to manually select an AUX or LIM input.

LED States

E300A will display the standard Alexa LED status when speaking or listening. The source type is shown by a different colour which is fully illuminated for 3s, before reducing to a small segment unless E300A is in an error state.

Idle/Standby States:


Idle or Standby State

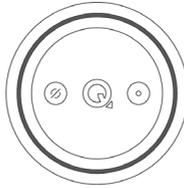

No LED illumination.

E300A's Microphone Muted:


Microphone Muted

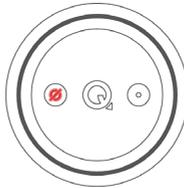

'Muted MIC Button' is illuminated in RED.


Volume Settings:

Current or Changing Volume

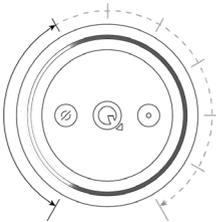

WHITE LED ring displaying the current and changing volume setting.


Mute Status

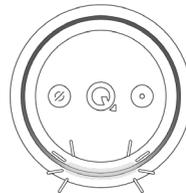

LED block flashing source colour indicating mute status.

Audio Sources - Internet:

Internet Source Selected

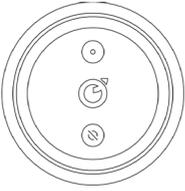

WHITE LED ring illumination for 3 seconds.




Internet Source Connected



WHITE LED block indicating the user is on internet source.

Audio Sources - AUX / TV / LIM:

AUX/TV/LIM Source Selected

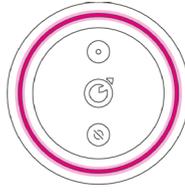

PINK LED illuminated for 3 seconds.




AUX Source



PINK LED block indicating the user is on AUX source.


AUX Source Error State

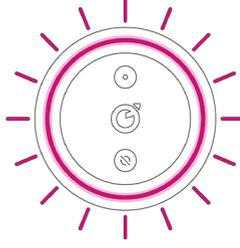

PINK LED ring displayed flashing twice every 3 seconds – no audio is heard – turn TV's audio setting from 'Auto' to 'PCM'.


Audio Sources - Bluetooth:

Bluetooth Source Selected

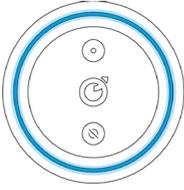


BLUE LED ring illumination for 3 seconds.

Pairing Mode

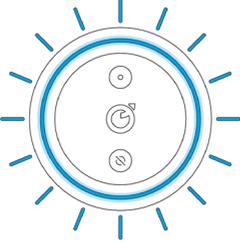

BLUE flashing LED ring for 60 seconds.


Bluetooth Source Connected

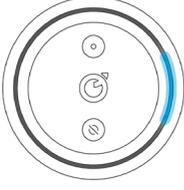

BLUE LED block indicating the user is on the Bluetooth source.


Error States:

No Internet Connection

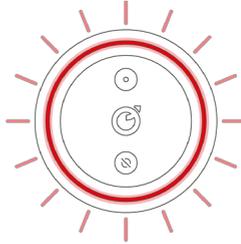


Red LED ring will flash 3 times if E300A is not connected to the internet.

Amplifier Over Temperature

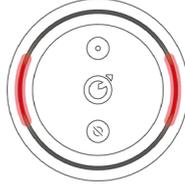

Two RED LED blocks indicate the amplifier has shut down due to over heating. E300A will wait for the temperature to reach normal levels and then automatically switch back on.

No Amazon Alexa Account

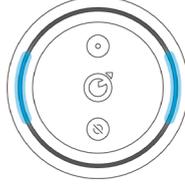

Two BLUE LED blocks imply no Alexa account is signed into the E300, display will last for 15 seconds – following the wake word (e.g. "Alexa").

Resetting the WiFi

If you need to reset the WiFi connection then this can be done from the buttons on the front of the main unit in the ceiling, or the remote control. All other settings such as the device name, Amazon account etc. are retained.

With E300A powered on, press and hold down the function key on the unit itself, or the Wake button on the remote control for 5 seconds, until the LED ring rotates a quarter orange segment. E300A is now in WiFi reset mode, and you can use the Q Net App to configure it to join a new WiFi.

Factory Reset

If you need to clear all settings with a factory reset, this can be done from the buttons on the front of the main unit in the ceiling. This will clear the Amazon account, clear all bluetooth paired devices and clear the WiFi connection settings.

With E300A powered on, press down BOTH the function and mic mute buttons together for 5 seconds, until the LED ring pulses an orange circle. After some time E300A will restart with a rotating light blue segment. You can then use the Q Net App to reconfigure WiFi and join an Amazon account.

Specification

Audio Sources	Network Audio Streaming	RJ45 Ethernet or WIFI	
	Bluetooth	Wireless	BT 5.2 A2DP
	AUX:		
	- Analogue	3.5mm Stereo	Sensitivity: 350mV Max Level: 750MV Impedence: ~ 30kΩ
	- Optical	mini TOSLINK	Resolution: 24bit 96kHz
	Local Input Module	RJ45	
Audio Outputs	Speaker Outputs	Left & Right	Stereo
Music Services / Streaming Methods	Airplay 2.0	Ethernet / WIFI	
	Spotify Connect		
	TIDAL Connect		
	Amazon Music MRA		
Amplifier	Class D	Continuous Power	2 x 25W @ 6Ω
		THD	0.2% @ Rated Power
		SNR	> 70dB @ Rated Power
		Frequency Response	20Hz - 20kHz +/- 1dB
		Latency	40-80ms Optical and Analogue
Ratings	E300ACeiling System	60 Minute Fire	BS EN 1365-2
			BS EN 1363-1
Control	Voice	Alexa Voice Services	
	IR Remote Control	x 13	
	BT AVRCP	v1.6 (Play, Pause, Skip, Track, Artist, Album Name)	
	Buttons	x 2 (Mute / Unmute, Reset)	
General	Power supply	Input	100 - 240V AC 50/60 Hz
		Output	22V DC 1.5Amps
		Dimensions (HxWxD)	30mm x 50mm x 115mm
	Power Consumption	Typical	10W
		Standby	1.65W
	Ceiling Panel	Net Weight	1.2kg
Dimensions (HxWxD)		125mm x 125mm x 145mm	
Cables	Speaker Cable	Gauge	18 AWG
		Lengths	2 x 4m

Warranty

Q Acoustics Media products are warranted free of defects in materials and workmanship for a period of 1 year from the date of purchase. During the warranty period Q Acoustics will, at its option, repair or replace any product found to be faulty after inspection by the company or its appointed distributor or agent.

Misuse and fair wear and tear are not covered by warranty.

Goods for repair should in the first instance be returned to the supplying dealer. If this is not possible contact Q Acoustics or their appointed distributor for your area to determine the correct warranty procedure. If possible the original packaging should be used to return the product as damage sustained during transit to the repair centre is not covered by the warranty. The warranty does not in any way affect your legal rights.

Q Acoustics
Armour Home Electronics Limited
Woodside 2, Dunmow Road
Bishops Stortford, Herts
CM23 5RG

Our policy is one of continuous product improvement.
We reserve the right to change the designs and specifications without notice.
This document contains information that is subject to change without notice.



E300A is certified to BS EN 1365-2 and BS EN 1363-1 to maintain a ceiling fire barrier for 60 minutes.



The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses



Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple, Apple TV, Apple Watch, iPad, iPad Air, iPad Pro, iPhone, Lightning, and tvOS are trademarks of Apple Inc., registered in the U.S. and other countries and regions.



Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.



The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and use of such marks by Armour Home Electronics Limited is under license. Other trademarks and trade names are those of their respective owners.



ACOUSTICS

QACOUSTICS.CO.UK

Q Install Warranty

Q Install loudspeakers are warranted free of defects in materials and workmanship for a period of 2 years from the date of purchase. During the warranty period Q Install will, at its option, repair or replace any product found to be faulty after inspection by the company or its appointed distributor or agent.

Misuse and fair wear and tear and not covered by warranty.

Goods for repair should in the first instance be returned to the supplying dealer. If this is not possible the item/s should be sent carriage paid preferably in the original packaging to Q Install or their appointed distributor for your area and accompanied by proof of purchase. Damage sustained by goods in transit to the repair centre is not covered warranty. Return carriage will be paid by Q Install or their distributor as appropriate.


The warranty does not in any way affect your legal rights.



COVERT LOUDSPEAKERS

Quick start installation instructions for Q Install models:

Qi 65C, Qi 65S, Qi 65CP, Qi 65SP, Qi 65C St, Qi 65S St,
Qi 65CP St, Qi 65SP St, Qi 65CW, Qi 65CW St

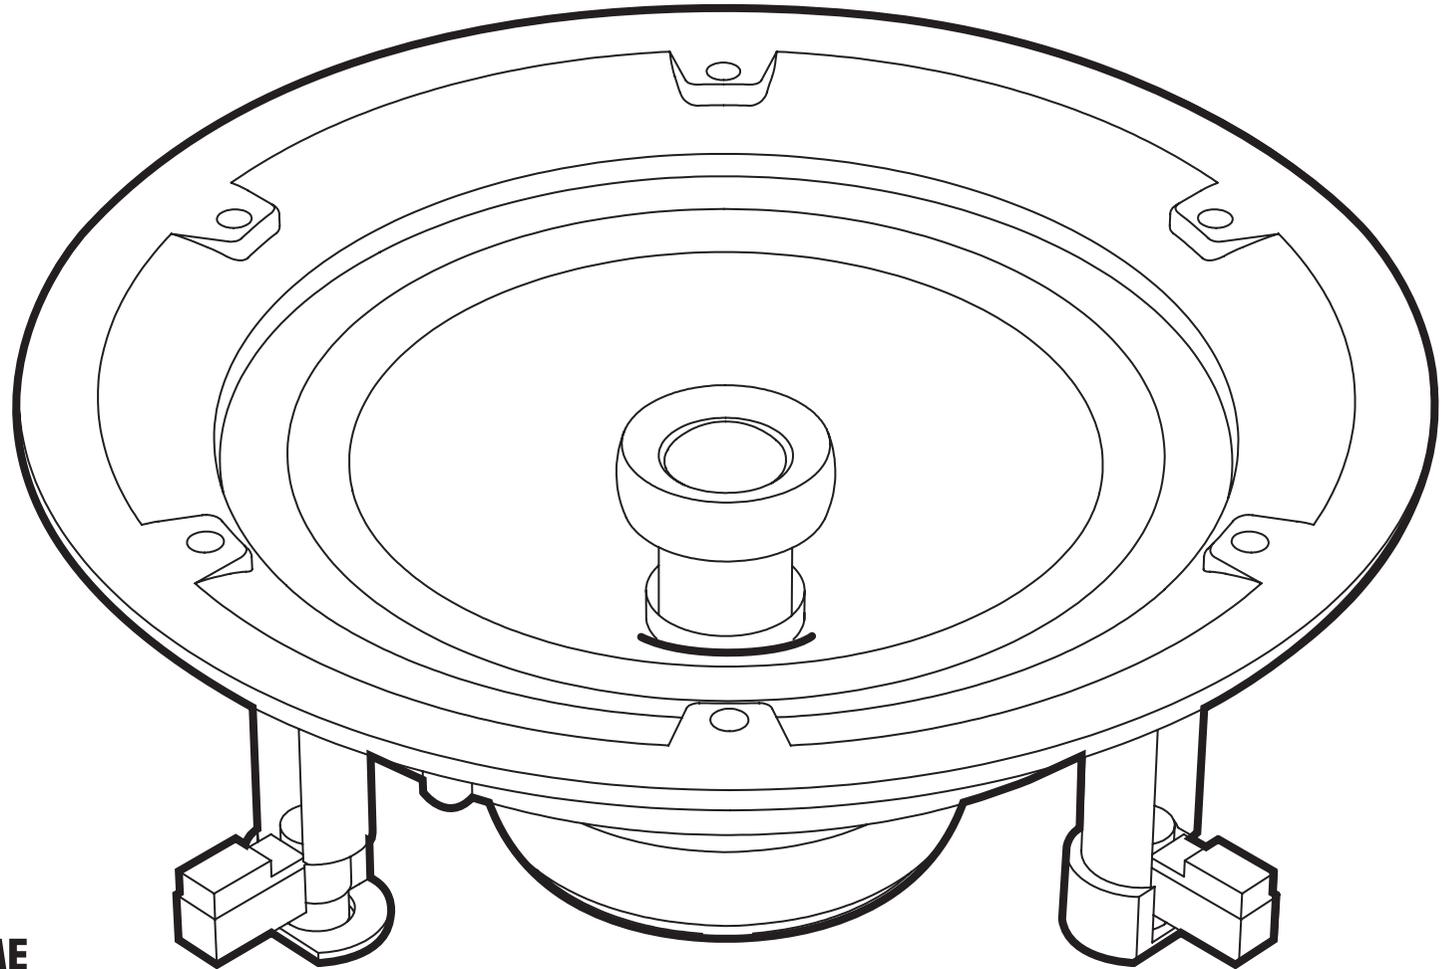

Appointed Distributor in the UK:

armourHOME

Armour Home Electronics Ltd
Units 7 & 8, Stortford Hall Industrial Park
Bishops Stortford, Herts, UK
CM23 5GZ

Thank you for purchasing Q Install ceiling speakers.
Please take a few minutes to familiarise yourself with the installation procedure.
The speakers are designed for installation into plasterboard ceilings or stud wall cavities.


Warning Notices

- Before cutting the mounting hole ensure that there is no conflict with other in-ceiling or in-wall installed items such as pipe work, electrical cabling, gas pipes and supporting joists etc.
- It is important to ensure that the installation complies with relevant building regulations.
- Take care not to apply pressure to the speaker cone and tweeter dome during installation.
- Ensure that the speaker model is suitable for use in the intended application. Only CW models should be used where there are high levels of moisture.

INSTALLING THE SPEAKERS


Step 1

Select a suitable mounting location for the speaker taking note of the Warning Notice above. Using the mounting template supplied mark the speaker position and cut the mounting hole.

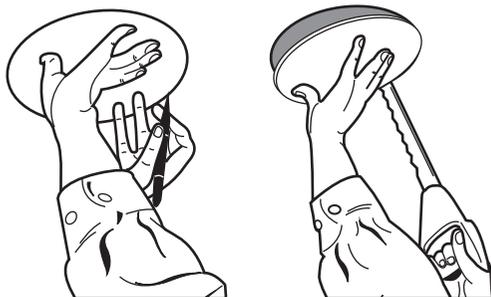


Step 2

Make sure all equipment is switched off. The speaker cable should be stripped back ~10mm so that there are bare wire ends. Remove the packaging and protective dust cover from speaker and attach the speaker leads using the pushdown spring clip terminals at the rear of the speaker. The positive conductor should be connected to the red terminal and the negative conductor to the black terminal. For 'St' versions there are two sets of terminals for connection of left and right channels.

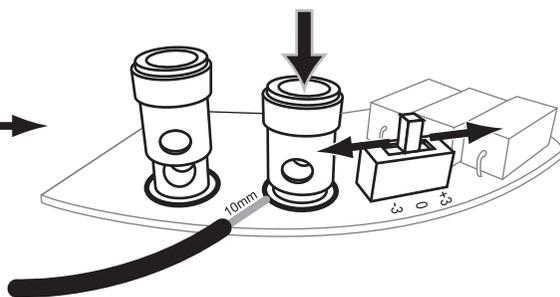


Note: Tweeter output level adjustment ('i' versions)

On some Q Install models the tweeter output level can be increased or decreased using the 3 position switch located at the rear of the product. It is recommended to leave the switch in the '0' position for the initial sound check.

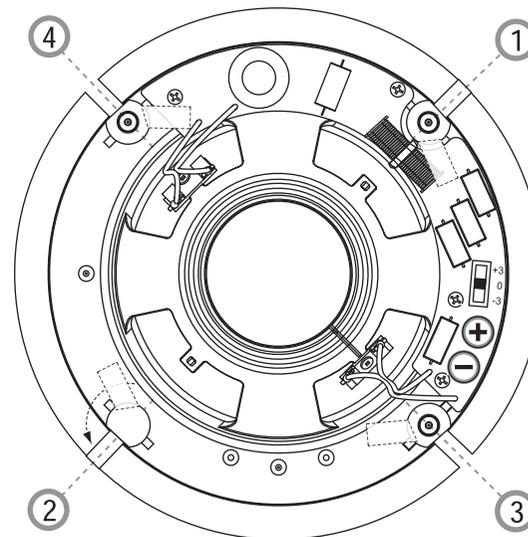


Step 3

Check that each of the 4 swing out clamps are rotated inwards. Position the speaker through the mounting hole and position flush with the ceiling. Whilst holding the speaker in place tighten each of the mounting screws using a No. 2 Pozidriv® screw driver in the order shown in left figure. When an increase in resistance is felt the clamp is in position.

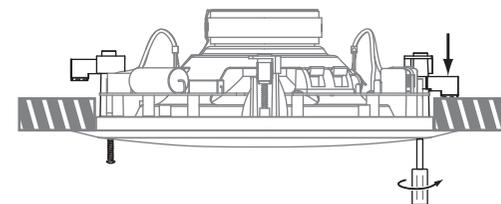


Step 4

Once the speakers are installed they should be tested before the grilles are fitted. All speaker models (other than 'St' Stereo models) feature a swivel tweeter that may be adjusted allowing the high frequencies to be directed towards or away from the normal listening position as required. The tweeter's outer frame (not dome) should be pushed gently to achieve the desired tweeter position.

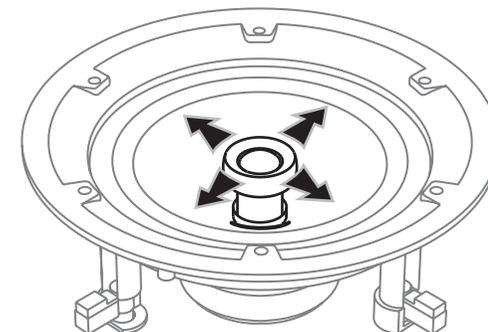

Note: Tweeter output level adjustment ('CW' versions)

The tweeter output level can be increased or decreased using the 3 position switch located at the front of the speaker. It is recommended to leave the switch in the '0' position for the initial sound check and then adjust if necessary.

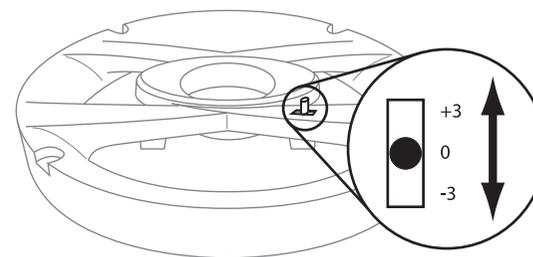

Step 5

For speakers featuring a magnetic grille, locate the grille over the speaker bezel where it will be pulled into place. Note that square grilles may be positioned at any angle required. For CW models push fit the grille into place by applying gentle pressure around the grille into place by applying gentle pressure around the grille edge is flush with the outer bezel.

Grille backing cloth

Some models feature a white backing cloth behind the grille to help minimize visual contrast with the ceiling. For the very best sound performance it is recommended that this cloth is removed before use. To remove simply peel away the backing cloth from the grille.

Q Install Warranty

Q Install loudspeakers are warranted free of defects in materials and workmanship for a period of 2 years from the date of purchase. During the warranty period Q Install will, at its option, repair or replace any product found to be faulty after inspection by the company or its appointed distributor or agent.

Misuse and fair wear and tear and not covered by warranty.

Goods for repair should in the first instance be returned to the supplying dealer. If this is not possible the item/s should be sent carriage paid preferably in the original packaging to Q Install or their appointed distributor for your area and accompanied by proof of purchase. Damage sustained by goods in transit to the repair centre is not covered warranty. Return carriage will be paid by Q Install or their distributor as appropriate.


The warranty does not in any way affect your legal rights.



COVERT LOUDSPEAKERS

Quick start installation instructions for Q Install models:

Qi 65C, Qi 65S, Qi 65CP, Qi 65SP, Qi 65C St, Qi 65S St,
Qi 65CP St, Qi 65SP St, Qi 65CW, Qi 65CW St

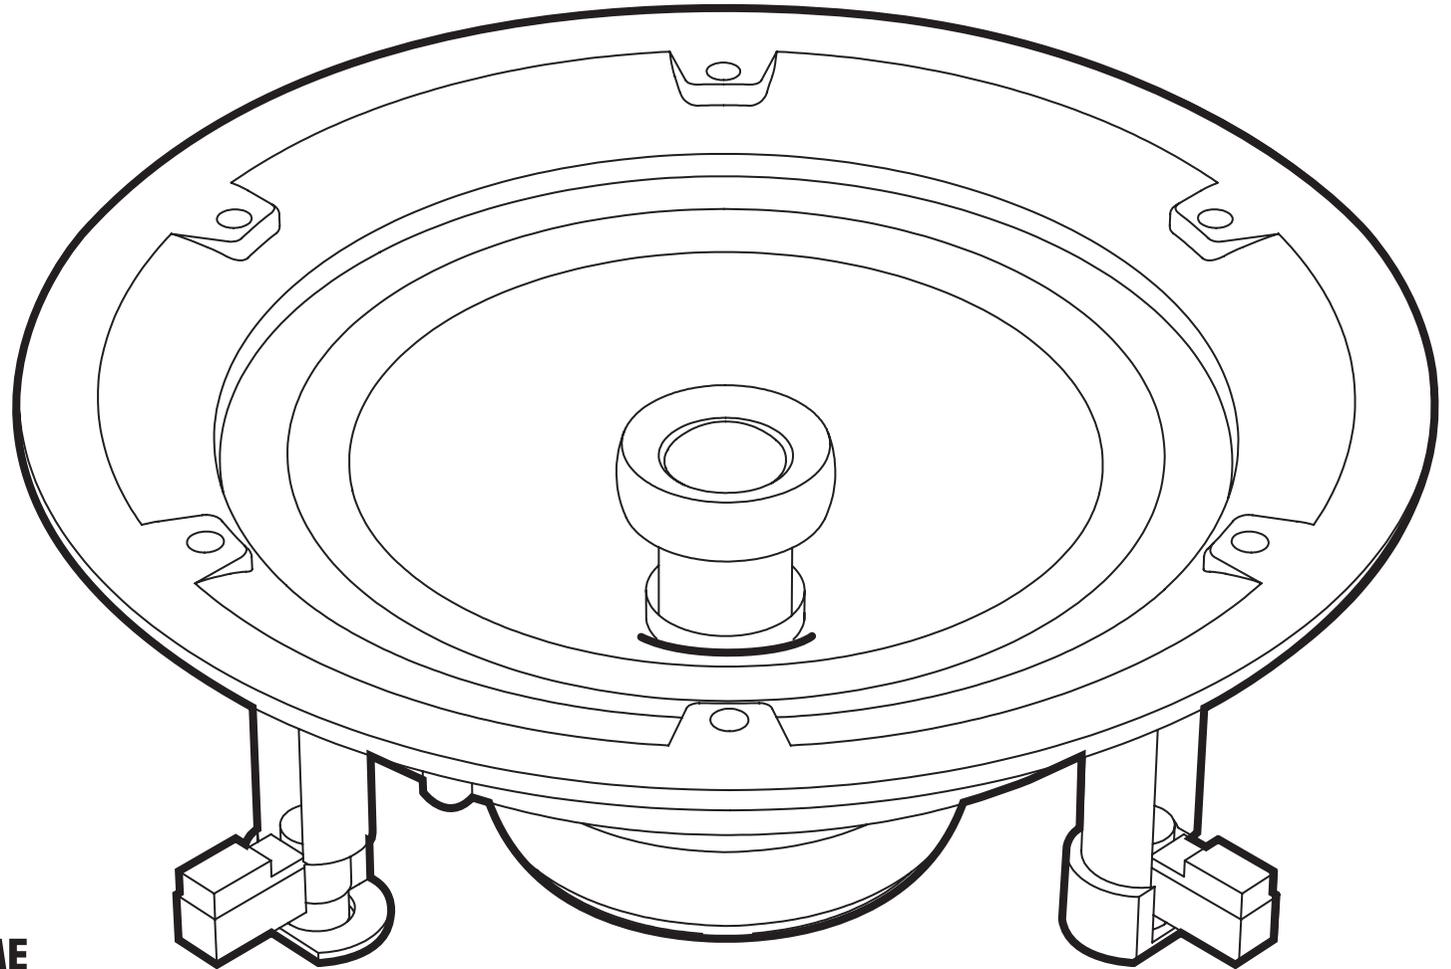

Appointed Distributor in the UK:

armourHOME

Armour Home Electronics Ltd
Units 7 & 8, Stortford Hall Industrial Park
Bishops Stortford, Herts, UK
CM23 5GZ

Thank you for purchasing Q Install ceiling speakers.
Please take a few minutes to familiarise yourself with the installation procedure.
The speakers are designed for installation into plasterboard ceilings or stud wall cavities.


Warning Notices

- Before cutting the mounting hole ensure that there is no conflict with other in-ceiling or in-wall installed items such as pipe work, electrical cabling, gas pipes and supporting joists etc.
- It is important to ensure that the installation complies with relevant building regulations.
- Take care not to apply pressure to the speaker cone and tweeter dome during installation.
- Ensure that the speaker model is suitable for use in the intended application. Only CW models should be used where there are high levels of moisture.

INSTALLING THE SPEAKERS


Step 1

Select a suitable mounting location for the speaker taking note of the Warning Notice above. Using the mounting template supplied mark the speaker position and cut the mounting hole.

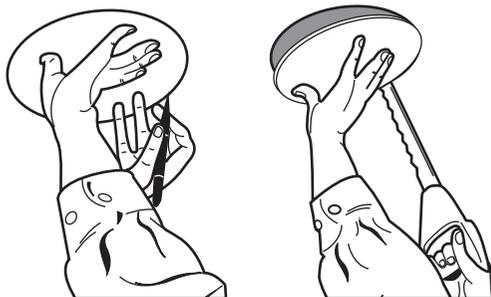


Step 2

Make sure all equipment is switched off. The speaker cable should be stripped back ~10mm so that there are bare wire ends. Remove the packaging and protective dust cover from speaker and attach the speaker leads using the pushdown spring clip terminals at the rear of the speaker. The positive conductor should be connected to the red terminal and the negative conductor to the black terminal. For 'St' versions there are two sets of terminals for connection of left and right channels.

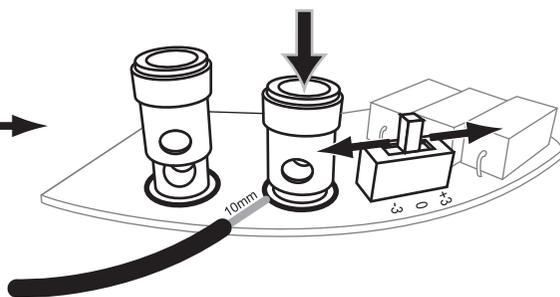


Note: Tweeter output level adjustment ('i' versions)

On some Q Install models the tweeter output level can be increased or decreased using the 3 position switch located at the rear of the product. It is recommended to leave the switch in the '0' position for the initial sound check.

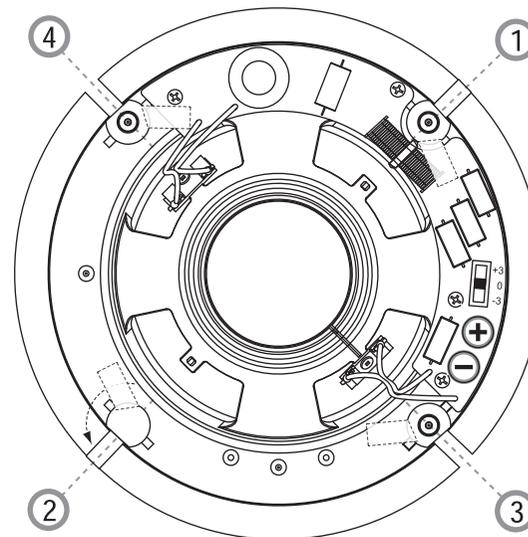


Step 3

Check that each of the 4 swing out clamps are rotated inwards. Position the speaker through the mounting hole and position flush with the ceiling. Whilst holding the speaker in place tighten each of the mounting screws using a No. 2 Pozidriv® screw driver in the order shown in left figure. When an increase in resistance is felt the clamp is in position.

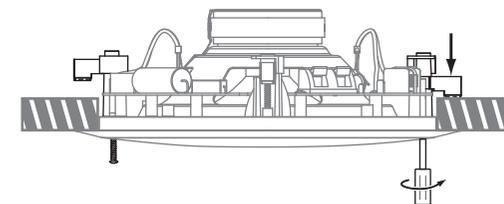


Step 4

Once the speakers are installed they should be tested before the grilles are fitted. All speaker models (other than 'St' Stereo models) feature a swivel tweeter that may be adjusted allowing the high frequencies to be directed towards or away from the normal listening position as required. The tweeter's outer frame (not dome) should be pushed gently to achieve the desired tweeter position.

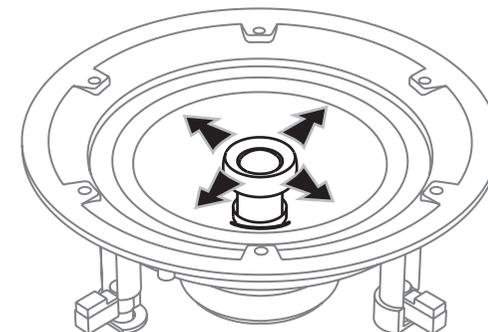

Note: Tweeter output level adjustment ('CW' versions)

The tweeter output level can be increased or decreased using the 3 position switch located at the front of the speaker. It is recommended to leave the switch in the '0' position for the initial sound check and then adjust if necessary.

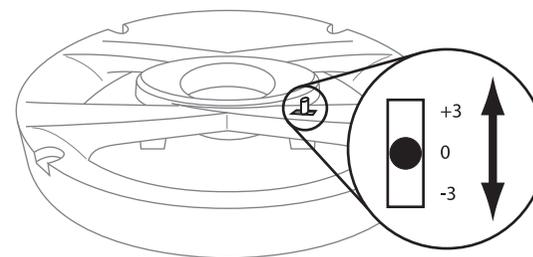

Step 5

For speakers featuring a magnetic grille, locate the grille over the speaker bezel where it will be pulled into place. Note that square grilles may be positioned at any angle required. For CW models push fit the grille into place by applying gentle pressure around the grille into place by applying gentle pressure around the grille edge is flush with the outer bezel.

Grille backing cloth

Some models feature a white backing cloth behind the grille to help minimize visual contrast with the ceiling. For the very best sound performance it is recommended that this cloth is removed before use. To remove simply peel away the backing cloth from the grille.