




COVERT LOUDSPEAKERS

Quick start installation instructions for Q Install models:

Qi 45EW & Qi 65LW

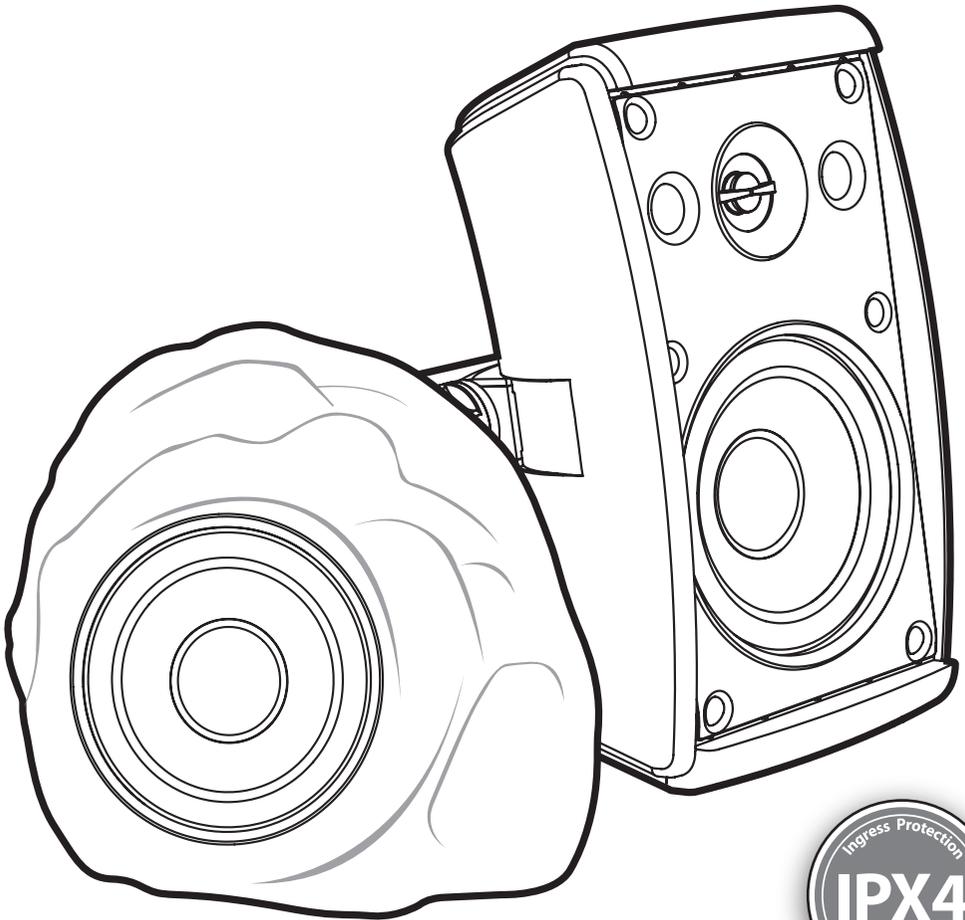

**Thank you for purchasing Q Install loudspeakers.
Please take a few minutes to familiarise yourself with the installation procedure.**

Warning Notices

- It is important to ensure that the installation complies with relevant building regulations. If in doubt always consult a qualified installer.
- Before drilling mounting holes or laying speaker cables ensure that there is no conflict with other in-wall/in-ceiling or underground installed items such as water or gas pipes, or electrical cabling etc.
- Ensure that the speaker model is suitable for use in the intended application. Note that these products are not suitable for use in a marine environment where they will be exposed to salt spray.
- These products should only be cleaned using a damp cloth without the use of chemical cleaning agents. Do not use a garden hose or high pressure water jet as it may damage the speakers.
- The Qi 45EW should NOT be positioned where water or rain will be driven directly into the grille (Figure 1). The speaker should always be mounted such that water will naturally drain away from the grille. For IPX4 protection in wet environments, the rubber ports plugs must be fitted.
- The Qi 65LW should NOT be positioned on ground where there is insufficient drainage and risk of being submerged in standing water.

SPEAKER CABLE GENERAL GUIDELINES


(ALWAYS ENSURE LOCAL REGULATIONS ARE MET)

Use speaker cable that has the correct rating, it is important to ensure that the wire gauge is adequate to cope with the longest run of cable required. When running speaker cables outside ensure they are moisture proof and resistant to UV exposure. If burying speaker cables in a trench use additional protection such as PVC piping or a cable rated for direct burial into the ground.

Distance	A.W.G.	mm ²
up to 45m	12	4.0
up to 30m	14	2.5
up to 20m	16	1.6

Minimum recommended wire gauges (single run to one speaker)

Qi 45EW Vertical Mounting

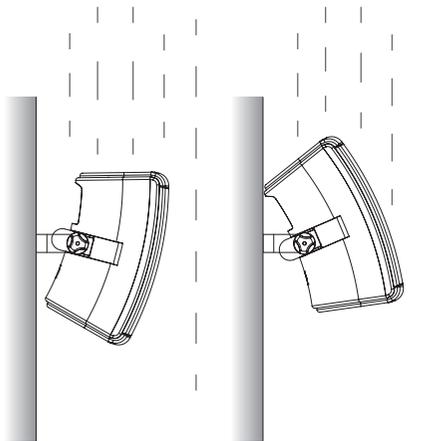

Qi 45EW Horizontal Mounting

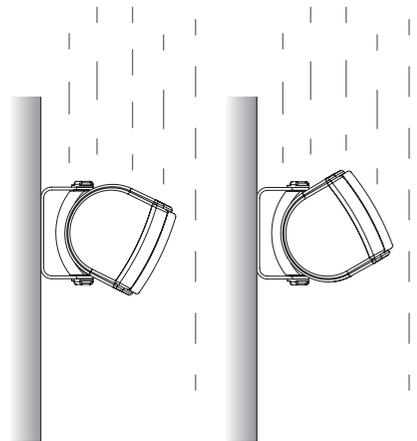


Figure 1. Qi 45EW installation orientation when exposed to rain.

Sound coverage area:

For large areas multiple pairs speakers may be required to give good stereo results. As a rough guide the recommended maximum area covered by two speakers should be no more than 30 - 40 m².

INSTALLING THE Qi 65LW ROCK SPEAKER

Step 1

Select a suitable location for the speaker taking note of the Warning Notices. The Qi 65LW can be installed directly on the ground, wood decking or a stone patio for example. Where it is mounted on earth it is recommended that a paving slab or similar is laid first to provide a firm horizontal base. This can then be covered with earth to camouflage. For best audio performance it is recommended that at least two speakers are installed. The perforated speaker grille/s should face the normal listening position and not be obstructed with shrubs or other objects (Figure 2) as this will reduce the sound level and audio performance.

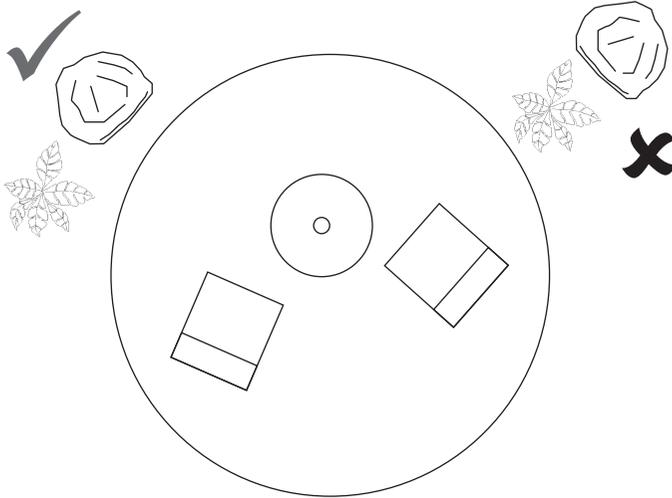


Figure 2. Position speakers clear of acoustic obstructions

Step 2

Make sure all audio equipment is switched off. Remove (unscrew) the square speaker connector cover on the base of the speaker to expose the speaker terminals. Any outer jacket should be trimmed back ~ 50 mm. Feed the speaker wires through the cover and then strip back the individual speaker conductors ~10mm so that there are bare wire ends. Attach the speaker leads using the pushdown spring clip terminals at the bottom of the speaker. The positive conductor should be connected to the red terminal and the negative conductor to the black terminal (Figure 3).

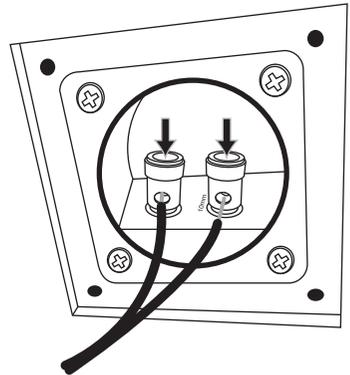


Figure 3. Qi 65LW Speaker cable connections

Step 3

Re-secure the speaker terminal cover plate. Position the speaker on its base ensuring that the cable exits through the notch at the rear of the speaker. Test the speaker/s with a music source to ensure there are no unwanted buzzes or vibrations from the supporting surface or nearby objects.

INSTALLING THE Qi 45EW INDOOR AND OUTDOOR LOUDSPEAKER

Step 1

Ensure that the package contains; Speaker, 1 x C-bracket, 2 x C-bracket lock nuts, 2 x rubber port plugs, 2 x speaker terminal weather protection boots and 1 x packet of grille adhesive. The speaker contains a 'C' mounting bracket and integrated angle adjuster that enables the speaker to be easily installed and adjusted in either a vertical or horizontal position.

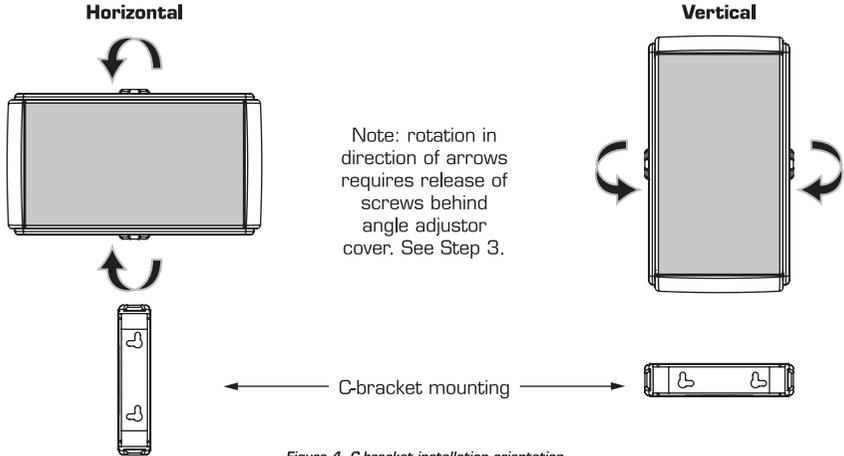


Figure 4. C-bracket installation orientation

Step 2

Decide on the preferred orientation of the speaker ensuring that all relevant Warning Notices are observed. For vertical speaker mounting the C-bracket should be mounted horizontally and for horizontal speaker mounting the C-bracket should be mounted vertically (Figure 4).

Using the bracket (separated from the speaker) as a template mark the position of the two fixing points on the surface to which the speaker is to be secured. It is important to ensure that there is sufficient room to both mount and adjust the angle of the speaker from any adjacent surfaces, so check this before drilling. Fixings should be selected (these are not included) that are appropriate for the mounting surface. Key slots are provided in the C-bracket that will accommodate an M4 sized pan screw head. Drill the holes and fit rawl plugs if required. Drive in the screws leaving ~ 5 mm of screw thread exposed on each. The bracket should be positioned over the exposed screw heads to check that the screws are accurately positioned and of the correct size to locate into the key slots. (Figure 5). The bracket should then be removed for attachment to the speaker in a safe location.

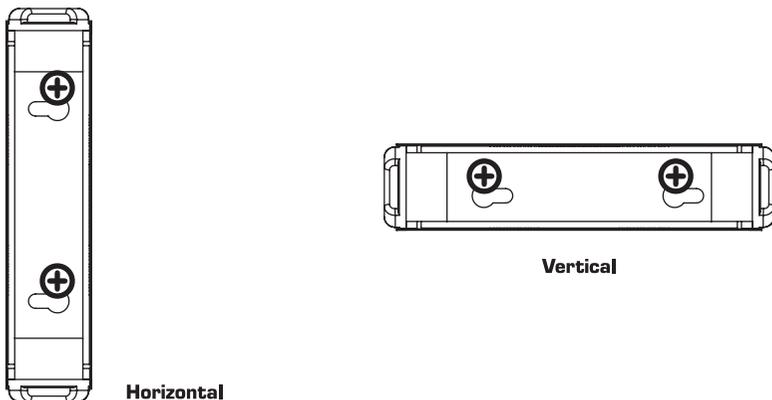


Figure 5. Ensure correct position of screws into key slots

Step 3

If mounting the speaker horizontally or requiring side to side rotation of a vertically mounted speaker (Figure 4), remove the plastic angle adjustor cover at the rear of the speaker by pulling it firmly (Figure 6), this will allow access to 2 locking screws (Figure 7). These should both be unscrewed a couple of turns each so that the angle adjustor can be rotated left or right (up or down) as required.

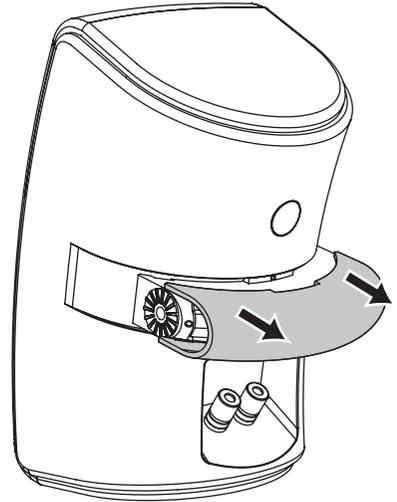


Figure 6. Qi 45EW removing angle adjustor cover

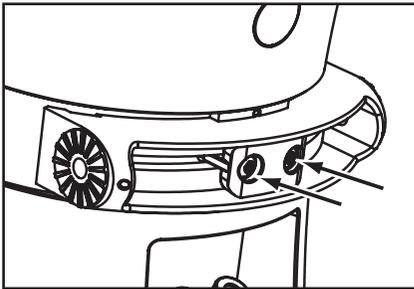


Figure 7. Qi 45EW Angle Adjustor screws
DO NOT REMOVE only loosen 2 turns

Note:

With a right angled screw driver it is possible to make adjustments with the speaker mounted on the wall as the cover can be removed and replaced with the C-bracket attached. Once the required angle is obtained the screws can be tightened and the cover clicked firmly back into place.

Step 4

Mount the C-bracket onto the speaker's angle adjustor using the 2 securing lock nuts (Figure 8). Ensure that the C-bracket is the correct way up so that when the speaker is mounted the screws will slot and secure correctly as shown in Figure 5. Tighten both locking nuts once the required C-bracket angle has been set.

Note: The locking nuts can be loosened and further adjustment undertaken when the speaker is on the wall if necessary.

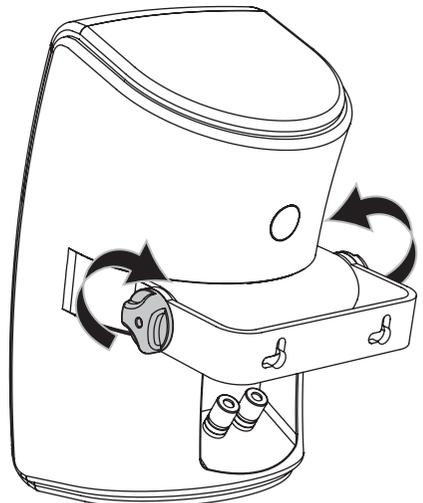


Figure 8. Qi 45EW attach the C-bracket to the speaker

Step 5

If fitted remove the rubber speaker terminal weather protection boots and keep these for use at Step 7. Weather protection boots are also packed separately within the carton.

Step 6

Mount the speaker on to the wall by passing the pre-installed (Step 2) securing screws through the C-bracket and slotting it down behind the screw heads. Using a right angled screwdriver tighten the screws so that the bracket is clamped securely to the wall.

Step 7

Strip back the individual speaker conductors ~10mm so that there are bare wire ends. Attach the speaker leads using the screw terminals at the rear of the speaker. The positive conductor should be connected to the red terminal and the negative conductor to the black terminal (Figure 9). Ensure that the weather protection boots are replaced over the terminals and that there are NO shorting strands of copper between the positive and negative terminals.

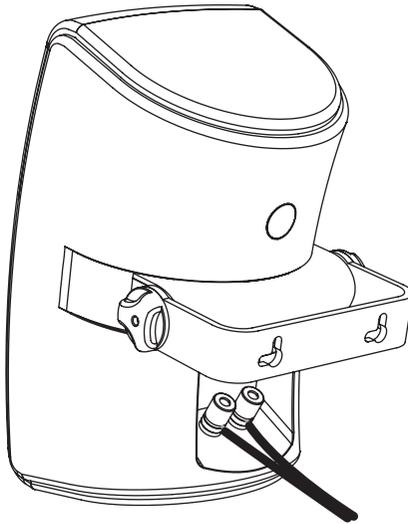


Figure 9. Qi 45EW speaker cable connections

Step 8

Position the speaker at the desired angle and tighten both the 2 rear angle adjusted locking screws (if necessary) and the C-bracket locking nuts.

Step 9

If the speakers are to be used where there is a possibility that water may be blown into the grille, the 'port' holes either side of the tweeter can be plugged using the supplied rubber port plugs. These should be pressed firmly into place (Figure 10).

Note: It is recommended that the plugs are only fitted when it is necessary to comply with IPX4, since the installation will reduce the amount of bass produced by the speaker.

To meet IPX4 the port plugs must be fitted.

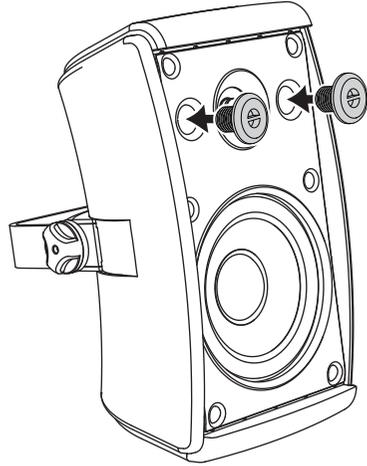


Figure 10. Insertion of rubber port plugs into port holes

Step 10

Included in the speaker pack is some flexible grille adhesive, this provides additional securing for the grille should it be considered necessary. To use gently pull the grille on both sides and pull away from the speaker (Figure 11). Press 4 pieces of the adhesive into the recess slot as indicated (Figure 12). Replace the grille by first ensuring that all grille edges are inside the bezel moulding and then pushing carefully back into place.

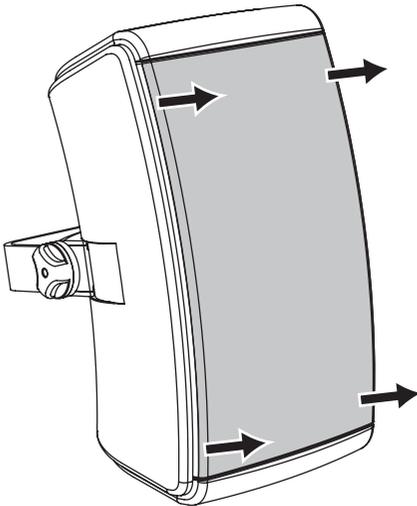


Figure 11. Qi 45EW grille removal

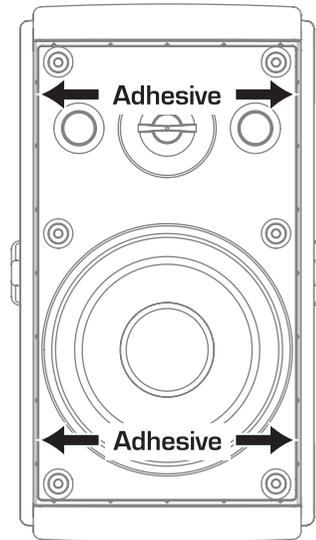


Figure 12. Positioning of adhesive strips before replacing grille

Step 11

Test the speaker to ensure that it is working correctly with no unwanted buzzes or rattles.

Q Install Warranty

Q Install loudspeakers are warranted free of defects in materials and workmanship for a period of 5 years from the date of purchase. During the warranty period Q Install will, at its option, repair or replace any product found to be faulty after inspection by the company or its appointed distributor or agent.

Misuse and fair wear and tear are not covered by the warranty.

Goods for repair should, in the first instance, be returned to the supplying dealer. If this is not possible the item/s should be sent carriage paid, preferably in the original packaging, to Q Install or their appointed regional distributor accompanied by proof of purchase. Damage sustained by goods in transit to the repair centre is not covered by the warranty. Return carriage will be paid by Q Install or their distributor as appropriate.

The warranty does not in any way affect your legal rights.

Appointed Distributor in the UK:

armourHOME

Armour Home Electronics Ltd
Stortford Hall Industrial Park
Bishops Stortford, Herts,
CM23 5GZ
UNITED KINGDOM

www.qinstall.co.uk

Q13412-IS_r4



B427BL

e-audio Bluetooth 4.0 Stereo Audio Amplifier 4 x 15W

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

You must inspect the product and its power supply for any signs of damage. If the product or power supply is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- This unit can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.
- Children below 8 years shall not play with the unit.
- Do not use this unit in locations where paint, petrol or other flammable liquids or materials are used or stored.
- To prevent the risk of electric shock or fire do not expose the amplifier or power supply to moisture or rain.
- If the amplifier or power supply comes into contact with water or other liquids stop using immediately and have the unit checked by a qualified person before further use.
- Ensure there is adequate ventilation around the unit and the power supply before use
- Do not use the unit for any purpose other than its intended use.
- Check the unit and power supply for damage periodically. If any damage is detected stop using it immediately and consult your supplier.
- For domestic use only
- There are no user serviceable parts in this product
- Do not leave this product switched on unattended.
- Only use the power supply provided with this unit
- This unit must only be installed by a competent person after taking a site survey to establish that the structure is suitable and that there are no existing plumbing, gas, electrical services or other obstructions already in place.
- Disconnect from the mains supply when not in use.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings).

BOX CONTENTS

4 x 3m speaker cables
1 x Bluetooth Power Amplifier
1 x Power Supply

PLACEMENT

Locate the B427BL on a wall (using the tabs at either end for screws, see diagram on next page), in a cavity wall or in a ceiling.


CONNECTING AMPLIFIER TO SPEAKERS (NOT INCLUDED)

The amplifier can be connected to up to 4 speakers (min. 4Ω)

1. Attach the black cable (terminal end) to the terminal marked with a minus symbol (-) on the speaker.
2. Attach the red cable (terminal end) to the terminal marked with a plus symbol (+) on the speaker. Repeat for the remaining speakers, if using.
3. Remove the euro block terminal (as shown in diagram below)
4. Connect the cable (bare end) attached to the left speaker, to the two left hand connections in the euro block (observing the polarity). The black cable should be on the left (labelled as 1 in the diagram below) and the red cable on the right (labelled as 2 on the diagram below)
5. Connect the cable (bare end) attached to the right speaker, to the two right hand connections in the euro block (observing the polarity). The red cable should be on the right (labelled as 4 in the diagram below) and the black cable on the left (labelled as 3 on the diagram below)

Now repeat steps 4 & 5 for the remaining 2 speakers, connecting to the euro block on the other end of the amplifier;

6. Connect the cable (bare end) attached to the left speaker, to the two left hand connections in the euro block (observing the polarity). The black cable should be on the left (labelled as 6 in the diagram below) and the red cable on the right (labelled as 7 on the diagram below)
7. Connect the cable (bare end) attached to the right speaker, to the two right hand connections in the euro block (observing the polarity). The red cable should be on the right (labelled as 9 in the diagram below) and the black cable on the left (labelled as 8 in the diagram below)
8. Tighten the screws on the euro block using a suitable screwdriver.
9. Insert the power plug from the power supply into the socket on the amplifier (labelled as 5 on the diagram below)
10. Plug the power supply into a mains outlet and switch on.

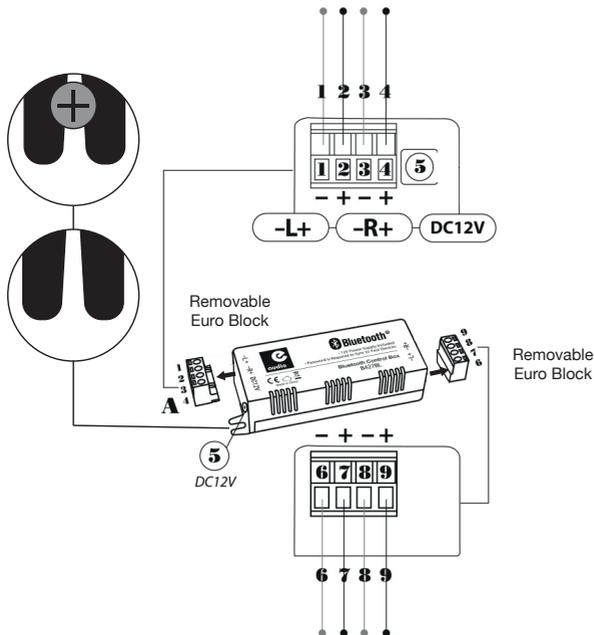

DEVICE SYNCING

To connect the amplifier to your device;

1. Ensure that the Bluetooth function on your mobile device is set to 'ON'
2. Ensure that the amplifier is plugged in
3. The amplifier should now be discoverable by your mobile device (you may need to scan for new devices)
4. The amplifier will show as 'B427BL'. To sync select the device name and enter the password - 012345

PAT TESTING

When used in a workplace, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

If hired out, it must be PAT tested prior to each hire.

We recommend that it is PAT tested regularly when used in a domestic environment.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Weight (excluding PSU).....	50g
Dimensions.....	27x41x118mm
Power Supply.....	Input 230V~ / Output 12Vdc 4A
Power.....	4 x 15W @ 4Ω
SNR.....	≥90dB
Bluetooth Version.....	4.0

CLEANING

- Disconnect from the mains supply before cleaning
- Use a dry, soft cloth only to clean the unit
- Do not use detergents or abrasive cleaners

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of one year.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

Electrovision Ltd., Lancots Lane, Sutton Oak, St. Helens, Merseyside WA9 3EX

website: www.electrovision.co.uk



802.767 **RL CONNEX**

RX30 Universal Cable Red & Black 2 x 0.75mm² 10m

10m Standard quality Red & Black stranded power 2x 0.75mm cable for automotive and other applications.

Product colour : Black, Red
CSA : 0.75mm²
Conductor : 24x0.2mm
Sheath : Black, Red
Outer diameter : 2.75 x 6mm
Weight (kg) : 0,25